SW80SP

Fully Automatic Washing Machine

user manual

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service, please register your product at

www.samsung.com/register

SAMSUNG

Code No. DC68-02817E-01_EN

WA80SPWFP-02817E-01_EN.indd 1 2013-01-15 11:48:01

features

1. Energy saving

With this course, you can save energy when using your washing machine.

The wash performance and damage test are recognized by registered institutions.

2. The Mist Shower

Effective residue removal - The mist dissolves laundry detergents more effectively to leave behind less residue.

A fine mist of water spray over the laundry reduces the amount of water necessary.

3. Diamond Drum

The diamond shaped drum creates a high water pressure, removing dirt from the laundry effectively. The diamond drum minimizes fabric damage extending the lifetime of the fabric. The glittering inner tub is both beautiful and powerful in the wash effect it creates.

4. Fuzzy Control

Fuzzy control operates with best washing program by sensing the washload like artificial intelligence.

5. Double Storm Pulsator- Less Tangle, Better Washing Performance

Tangle Free - Multi-dimensional water currents help clothes stay tangle free.

Water current technology designed specifically to enhance washing performance. The power of tornado-like multi-dimensional water currents guarantee excellent washing performance.

6. Magic Filter

This unique magic Filter ensures that all the lint inside the tub is captured for top quality filtering results to deliver consistently effective cleaning results.

7. Child-Lock Function

This is a device to protect children from being accidentally hurt while playing with the washer. (For more information, see page11, page14.)

WA80SPWFP-02817E-01_EN.indd 2 2013-01-15 11:48:01

safety information

Throughout this manual, you'll see Warning ⚠ and Caution ⚠ notes. These warnings, cautions, and the important safety instructions that follow do not cover all possible conditions and situations that may occur. It's your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer. Samsung is not liable for damages resulting from improper use.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual means:

WARNING	Hazards or unsafe practices that may result in **severe personal injury or death**.
CAUTION	Hazards or unsafe practices that may result in **minor personal injury or property damage**.
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with all any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

Install and store your washer inside, away from exposure to weather.

Install and level your washer on a floor that can support its weight.

Your washer must be properly grounded. Never plug it into an ungrounded outlet.

Position the washer so that a wall plug is accessible after the installation is completed.

WA80SPWFP-02817E-01_EN.indd 3 2013-01-15 11:48:01

safety information

CAUTION To reduce the risk of fire or explosion:

- Do not wash items that have been washed, soaked, or treated with gasoline, dry cleaning solvents, or other flammable or explosive substances. They give off vapors that could ignite or explode. Rinse by hand any material that has been exposed to cleaning solvent or other flammable liquids or solids before putting in your washer. Be sure that all traces of such liquids, solids, and fumes have been removed. Dangerous substances include acetone, denatured alcohol, gasoline, kerosene, certain liquid housePause cleaners and spot removers, turpentine, waxes, and wax removers.
- Do not put gasoline, dry cleaning solvents, or other flammable or explosive substances into the washer.
- Under certain conditions, hydrogen gas may be produced in a hot water system – such as your hot water heater - that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water faucets in your home, and let the water flow for several minutes before using your washer. This will release any hydrogen gas build–up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time.

Ventilate the room immediately without touching the power plug if there is a gas leak.

Unplug the power cord before servicing your washer.

Do not reach into the appliance when the tub is moving.

Do not reach under the appliance with your hands or with an object as you may be injured by the spinning parts beneath the washer.

WARNING Do not let children play on or in your washer. Children may be seriously injured if trapped inside.

WARNING Do not let children attempt to look into the washer as falling into the washer is extremely dangerous and may be fatal.

WARNING This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Do not repair, replace, or service any part of your washer yourself unless you fully understand the recommended user–repair instructions and have the skills to carry them out. Work done by an unauthorized person may void your warranty.

Store laundry detergents and other laundry supplies in a cool, dry place out of children's reach.

Disconnect the hoses and turn off the water when not using the washer.

If the power cord is damaged, it must be replaced by the manufacturer, a service agent or similarly qualified person in order to avoid a hazard.

Do not forcefully bend the power cable or place any heavy objects on the cable.

Do not touch the power cord with wet hands.

Do not overload the power outlet with too many appliances.

WA80SPWFP-02817E-01_EN.indd 4 2013-01-15 11:48:01

Do not install the washer nearby electrical implements and do not place any candles or cigarettes on the washer.

Do not go near the washer if it is flooded or under water, as there is a risk of electric shock. Unplug the washer and drain the water completely.

Do not combine chlorine bleach, ammonia, or acids (such as vinegar or rust remover) in the same wash. The fumes that can form when any of these items are combined are hazardous.

Do not machine wash fiberglass materials. Small particles can stick to fabrics washed in subsequent loads and cause skin irritation.

If this appliance is supplied from a cord extension set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

Before disposing of your washer, remove the lid so that children or small animals cannot get trapped inside.

Connect the washer to the main water supply using a new set of hoses. Do not reuse an old set of hoses.

Water inlet hoses deteriorate over time. Check the hoses periodically for bulges, kinks, cuts, wear, and leaks, and replace them as needed and at least every five years.

Before each wash, empty the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washer. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

If the washer does not stop within 15 seconds after you open the lid, call a service agent immediately.

Connect the grounding wire to the shell plate, and bury it under at least 10 in (25 cm) of earth: Alternatively, connect the ground wire to the appropriate pin on a properly grounded power receptacle. Never connect the wire to a telephone line, lightning rod, or gas pipe.

For washers with ventilation openings in the base, that a carpet must not obstruct the openings.

The product you have purchased is designed for domestic use only.
The use for business purposes qualifies as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

The washing machine shall not be installed at a humid place.

WA80SPWFP-02817E-01_EN.indd 5 2013-01-15 11:48:01

contents

SETTING UP YOUR WASHER 7

7 Description of part
8 Checking before washing and caring for garments
10 How to wash automatically depends on the laundry
11 Control Panel
12 Fuzzy program
12 Quick program
12 Super Clean program
12 Energy Saving program
13 Keeping the tub clean
13 Wool program
13 Blanket program
13 Delicate program
14 Delay Start
14 Memory
14 Child Lock

MANUAL FUNCTIONS 15

15 Manual functions

INSTALLATION & MAINTENANCE 16

16 Environment
16 Levelling
17 Connecting the water supply hose
18 How to connect the drain hose
18 In case of pump-drained washer
18 Cautions when inserting the drain hose(in case of general washer)
19 Assembling the vermin protection panel
19 How to put the detergent in
19 How to add the fabric softener
19 Water supply connector filter
20 Cleaning the filter
20 Clean the pump filter

TROUBLESHOOTING 21

21 Troubleshooting

WASHING MACHINE WON'T WORK? 22

22 Washing machine won't work?

SPECIFICATION 23

23 Specification

WA80SPWFP-02817E-01_EN.indd 6 2013-01-15 □□ 11:48:01

setting up your washer

DESCRIPTION OF PART

The User's Manual is for common use.
Make use of the User's Manual depending upon your washing machine model.

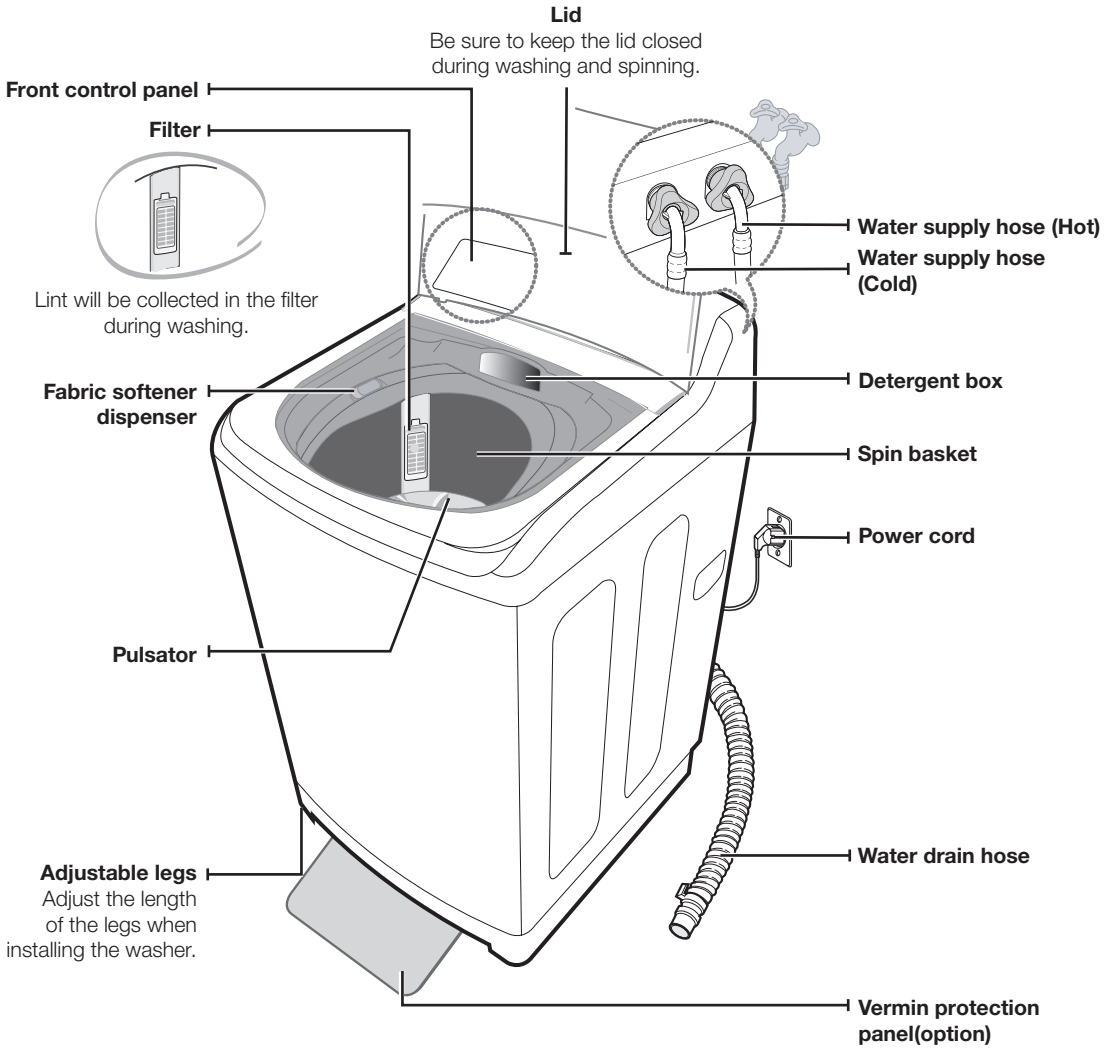

WA80SPWFP-02817E-01_EN.indd 7 2013-01-15 11:48:02

setting up your washer

CHECKING BEFORE WASHING AND CARING FOR GARMENTS

Must follow the checkpoints in order to avoid machine problems or damages on garments.

- If the below problems are caused by customer's faults, separate service fee will be charged.

Checkpoints Before Starting Washing

Check if the clothes are bleaching or not.

- Add liquid detergent to a white towel and the garment where you can't notice well. Then, rub together strongly. Check if the color transferred to the towel.
- Be careful for scarves and imported clothes since they are easily discoloring.
- Check for stains or partial dirt.
- If stains are found, use the towel wet with detergents to rub on in a single direction.
- Before washing, the sleeves, collar, dress hem and pockets are pre-treated by brushing with detergents.

The wrinkle-processed clothes made of wool are specially treated by fixing them with threads before washing. The threads shall be removed after the clothes are dried.

Not washable laundry

Clothes those are easily transformable even by soaking in water.

- Even by soaking in water, neckties, brassieres, jackets, suits and coats can be easily transformed like shrinking and discoloring on the garment surfaces because they are mostly made of rayon, polynosic, cuff and their blend fabrics.
- The wrinkle-processed, embossed, or resin processed products are easy to transform even by soaking in water.
- Easily discoloring products made of cotton and wool, wrinkled silk, leather products, leather accessory, leather ornamented clothes and its accessory.
- Don't wash those clothes without handling guideline or material indication tag.

About Detergent

- When detergents are not dissolving well, use warm water (about 40°C) to dissolve the detergent.

CAUTION

- Use an appropriate amount.
- Even if excess amount of detergent is used, there is not much difference in washing result. It may cause damages to the garments because rinsing is not enough.
- The bleaching agent may cause damages to garments since it is strong alkali.
- Do sufficient rinsing because the powder detergent is easily remained on the garments causing bad odors.
- If too much detergent is used or cold water is used, it doesn't dissolve completely and remain on the garments, hose or spin basket, causing contamination on clothes.
- In case of reserved washing, detergents must be put in the detergent box. If the powder detergents are spread on laundry directly, it may cause discoloration.

WA80SPWFP-02817E-01_EN.indd 8 2013-01-15 11:48:02

CARING FOR CLOTHES BEFORE WASHING

Take out personal belongings from pockets.



- Caution, Check the pockets! Hairpins and coins cause damages to clothes and washing machine. They make noise and problems to the machine. Must check the pocket.

If pants zippers are open while washing, the spin basket may be damaged. The zipper should be closed and fixed with a string before washing.

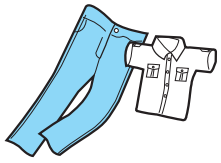

- Metal on the clothing may cause damage to the clothes and the tub.
- Turn clothing with buttons and embroidered clothes inside out the before washing them.
- Clothing with long strings may become entangled with other clothes, and may cause damage to the clothing. Be sure to fix the strings before washing.

Waterproof clothes (Ski Wear, Diaper Covers, Footboards) are not allowed for washing.

- This may cause the laundry to be ejected or cause the washing machine to vibrate abnormally, which may result in personal injury or damage the washing machine, the floor or the clothing. (Diapers, waterproof clothing, raincoats, umbrella covers, skiwear, car cover sheets, and sleeping bags, etc.).
- When the tub rotates, water may become trapped in the waterproof clothing or fabric and can collect in a corner, causing abnormal vibrations. In addition, the laundry rises and may be ejected and cause personal injury.

Shake the dirt or soils from clothes.

- Soil and sands may rub delicate garments to cause damages and the washing result may be unsatisfactory.

Do pre-washing for white socks, sleeves, and collars before the main washing.

- For stains and dirt on collars, sleeves, hems, and pockets, apply some detergent to them and apply it lightly with a brush before washing.
- Use powdered or liquid detergent. Do not use soap as the tub may become dirty from the dirt on it.

Turn inside out for those nappy clothes before washing.

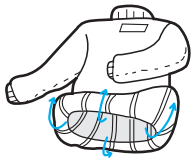

- If clothes have too much foreign matter, separate them for washing. Other clothes may pick up those dirty matters (dirt, thread).
- Wash black colored clothes and cotton towels separately. If they are washed together, towels may pick up dirty matters. Check before washing.

Cashmilon and those garments having big volume and lightweight (eg. Lasedecorated clothes, lingerie, nylon stocking, synthetic fabrics etc.) may rise and cause damages to the clothes and problems to the machine. Use the laundry net or wash them separately.

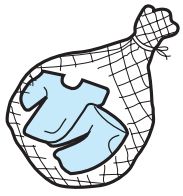

- Must put those long stringed clothes, lase-worked clothes, bed cover sheet, wool clothes into a laundry net before washing.
- Put wool clothes in the laundry net.
- Use only those commercial laundry net for washing.

Curtains, floating garments or blue jeans shall be pressed not to float on the water.

- If they are floated on the water, press Start/Pause button to stop and press them to soak in the water. If the washing goes on with clothes floating on the water, it may cause damage to the clothes and the washing machine as well as unsatisfactory washing result.

WA80SPWFP-02817E-01_EN.indd 9 2013-01-15 11:48:02

setting up your washer

HOW TO WASH AUTOMATICALLY DEPENDS ON THE LAUNDRY

Before starting washing, check the following;

- Connect the water supply hose to the water tap. Leave a tap open. Plug the power cord in. Make sure to lay down the drain hose.

Washing for the first time

Before washing clothes for the first time, you must run a complete cycle without clothes.
To do this:

1. Press the **Power** button.
2. Open the detergent drawer and insert a little detergent.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.
   This will remove any water from the manufacturer's test run remaining in the machine.

Special notes!

Clothes loading order

- When loading the clothes into this machine ensure the following loading order is used for maximum washing effectiveness. T shirts, bath towels, table cloths, business shirts, bed sheets, pillow cases, under shorts, wash cloths then finally handkerchiefs.

Automatic Sensing Function

- For Fuzzy,Quick,Super clean, Water saving program the amount of laundry is automatically sensed and then appropriate water level, washing time, rinsing cycle, and spinning time are automatically selected for automatic washing.
- After the power is on, a program is selected and **Start/Pause** button is pressed. Then, the washing tub starts spinning without water. This action senses how much laundry is in the washing basket, not a machine problem. After this sensing process, water is then supplied automatically.

Adding Detergent and Softener

- It senses the amount of laundry and indicates the water level. Then, it starts water supply right away.
- During the water supply, it is possible to open the detergent box and add detergent. However, it is better to press **Start/Pause** button to stop water supply and add detergent. Close the lid and press **Start/Pause** button again. This way is much more convenient. (However, during the water saving course, you cannot open the lid.)
- If the softener is inserted in the softener dispenser, it automatically adds in at the last rinsing cycle.

Put the laundry into the washer and add detergent

- Be careful not to overload. Use the right detergent for the fabrics you are washing.

- If the lid is open while running, the washing machine is stopped automatically for safety. (Except, water supply continues while the lid is open.)
- When hot water is selected, both cold and hot water are supplied for the first 20 seconds in order to protect the clothes.
- Possible to control the washing time, rinsing cycle, and spinning time at every program during the washing.

WA80SPWFP-02817E-01_EN.indd 10 2013-01-15 11:48:02

CONTROL PANEL

For more details, see control panel of your washing machine.

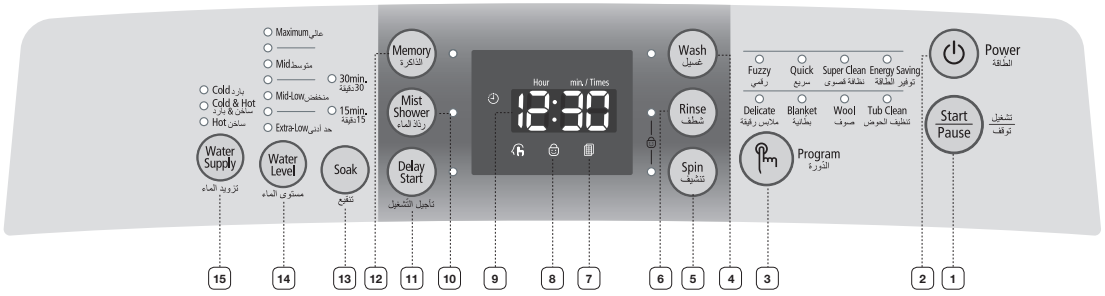

1	**START/PAUSE BUTTON**	Press to pause and restart programs. To change the washing procedure during an operation, press this button to stop the operation, and press it again to restart the washer after changing the washing procedure.
2	**POWER BUTTON**	Press this button once to turn the power on. Press it again to turn the power off.
3	**PROGRAM SELECTION BUTTON**	Press this button repeatedly to cycle through the washing programs: [Fuzzy → Quick → Super Clean → Water Saving → Clean Tub → Wool → Blanket → Delicate]
4	**WASH BUTTON**	Press this button to only perform a wash cycle or to adjust the wash time.
5	**SPIN BUTTON**	Press this button to only perform a spin cycle or to adjust the spin time. When only a spin cycle is selected, the spin time will be different from the total remaining time. This is because the total remaining time includes the actual spin time, the time for the water to drain and the washer to stop.
6	**RINSE BUTTON**	Press this button to perform only the rinse cycle or to adjust the amount of rinse cycles.
7	**FILTER CHECK**	When the wash is finished, the warning lamp lights up on the filter check. When the door is opened, it turns off. (This is not a fault.)When the Magic filter is clogged, foreign materials may start sticking to the laundry. To ensure a clean wash, please remove foreign materials from the filter after every wash.
8	**CHILD-LOCK FUNCTION**	This is a device to protect children from being accidentally hurt while playing with the washer. • How to start the Child-Lock function: - Press the “Power” button to go to an initial washing mode. - By pressing “Start/Pause” button, you start washing and in case Child Lock function is needed during the laundry - Press both the “Rinse” and “Spin” buttons at the same times.(for 3 seconds) (Note: You cannot perform the function without the “Power” button on. If the Child Lock function is activated, the Child Lock icon blinks.) • To release the function of Child-Lock: In case the “Child-Lock” is programmed, press both the “Rinse” and “Spin” buttons at the same time.
9	**REMAINING TIME, DELAY START TIME, ERROR DISPLAY**	The display shows the remaining wash time, the reserved delayed start time and error messages.
10	**MIST SHOWER BUTTON(OPTION)**	Press this button once to operate.The mist dissolves laundry detergents more effectively leaving behind less residue.
11	**DELAY START BUTTON**	Press this button to finish the wash at a specified time. Turn your washer off to cancel a previously delayed start time. You can set the delayed start time from between 3 to 18 hours.

WA80SPWFP-02817E-01_EN.indd 11 2013-01-15 11:48:02

12 **MEMORY BUTTON (OPTION)**	Press this button once to operate. Manually select the functions to use. Your choices are automatically saved when perssing the Start/Pause button. To use a memorized course, press the Memory button and then press the Start/Pause button. - The memorized functions will be displayed on the panel. Insert some detergent and rinse detergent in proportion to the water level and close the cover. This function allows frequently used functions to be memorized so that they can be easily used when needed.
13 **SOAK BUTTON**	Press this button to perform a soak wash. This function cannot be selected during a Delicate, a wool course. Soaking is automatically applied during a Clean tub course. You can set the soak time from between 15 to 30 minutes.
14 **WATER LEVEL BUTTON(OPTION)**	The water level is automatically adjusted. However, you can select the water level manually by repeatedly pressing this button.
15 **WATER SUPPLY BUTTON**	Press this button repeatedly to cycle through the water options: Cold → Cold & Hot → Hot → Cold

Fuzzy program

Use this program to automatically select the optimal washing program.

1. Press the **Power** button to turn the washer "On".
2. Press the **Start/Pause** button. The water level is selected automatically.
3. The wash, rinse, and spin cycles follow.
4. To pause a program, press the **Start/Pause** button again. You can change the program when it is paused.
5. Close the lid.

Quick program

The Quick program is good for light or slightly stained laundry.

1. Press the **Power** button to turn the washer "On".
2. Press the **Program** select button.
3. Press the **Start/Pause** button. The water level is selected automatically.
4. The wash, rinse, and spin cycles follow.
5. To pause a program, press the **Start/Pause** button again. You can change the program when it is paused.
6. Close the lid.

Super Clean program

Use this program to achieve the cleanest wash.

This program provides you with the optimum in washing performance through the 5-step super clean system.

1. Press the **Power** button to turn the washer "On".
2. Press the **Program** select button.
3. Press the **Start/Pause** button.

The water level is selected between Maximum and Mid or at the mid-level between Mid and Mid-low.

4. Close the lid.

Energy Saving program

Use this course to save energy.

1. Press the **Power** button to "**On**".
2. Press the **Course** select button three times.
3. Press the **Start/Pause** button.
   Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Pause** button again. You can change the course when paused.
4. Close the lid.

WA80SPWFP-02817E-01_EN.indd 12 2013-01-15 11:48:02

Keeping the tub clean

When using the machine under humid conditions for an extended time, various bacteria from the air may stick to the tub and form black dirt (fungi), causing damage to the human body.

To keep the tub clean and hygienic at all times, it is recommended reading "**Clean Tub program**" above and using only dedicated or recommended detergents to clean the tub regularly at least once every one to three months.

Wool program

Use this program to wash delicate clothing items such as washable sweaters, cardigans, and other wool items.

1. Press the **Power** button to turn the washer "On".
2. Press the **Program** select button.
3. Press the **Start/Pause** button.
4. The wash, rinse, and spin cycles follow.
5. To pause a program, press the **Start/Pause** button again. You can change the program when it is paused.
6. Close the lid.

- You can select only Cold water.
- The last spin cycle is a light cycle to prevent wrinkles.
- Use only detergent indicated by the laundry.
- Refer to the Care Label on the clothing for the appropriate wash information.
- Make sure buttons are fastened and that clothing is turned inside out.

Blanket program

Use this program for big volume laundry items such as blankets and bed cover sheets.

1. Press the **Power** button to turn the washer "On".
2. Press the **Program** select button.
3. Press the **Start/Pasue** button.
4. The wash, rinse, and spin cycles follow.
5. To pause a program, press the **Start/Pause** button again. You can change the program when it is paused.
6. Close the lid.

- Do not wash electric blankets and carpets.
- Fold big volume laundry items (blankets and bed cover sheets) in the following way before adding them into the spin basket.
- Purchase a laundry net for light and big volume laundry items (e.g. cashmere, blankets) as they may rise to the top of the washer and become damaged.

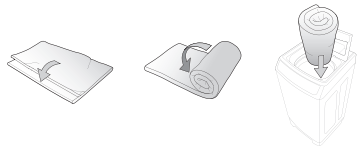

Delicate program

Washable sweater, cardigan, delicate clothes etc.

1. Press the **Power** button to "**On**".
2. Press the **Course** select button six times
3. Press the **Start/Pause** button.
   Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Pause** button again. You can change the course when paused.
4. Close the lid.

- You can only select cold water.
- The last spin operates lightly to prevent wrinkles.
- Use the detergent indicated in the laundry.

WA80SPWFP-02817E-01_EN.indd 13 2013-01-15 11:48:03

Delay Start

Use this to specify a time for the wash cycle to start, for example, when you need to go out and are unable to monitor the washer.

1. Press the **Power** button to turn the washer "On".
2. Press the **Delay Start** button once.
   You may set the delay end time using the **Delay Start** button from between 3 to 18 hours.
3. Press the **Start/Pause** button and add the appropriate amount of detergent into the detergent drawer.
4. Close the lid. The wash will finish by the set time.
   Add detergent and softener according to the water level and close the lid.

- Detergent must be added into the detergent drawer.
- If detergent is added onto the laundry directly, some clothes may become discolored because the start has been delayed.
- To cancel a Delay Start, press the **Power** button.

Memory

Use this program to create your very own favorite or frequently used programs and store them in the washer so that you can select them at any time.

1. Press the **Power** button to turn the washer "On".
2. Press the **Memory** button.
3. Select your frequently used functions.
   Select Wash, Rinse or Spin according to your requirements.
4. Press the **Start/Pause** button to store them.
5. Add detergent and softener according to the water level and close the lid.

- If you select the Memory button after turning the washer "On", the stored settings are automatically retrieved.
- To change the stored settings, select the Memory button, reconfigure the settings and then press the Start/Pause button. Then, the changes are stored.

Child Lock

This function is for protecting children, the elderly and the frail.

1. Press the Power button.
2. To activate the Child Lock function, press and hold both the Rinse and Spin buttons down simultaneously for 3 seconds. (If the Child Lock function is activated, the Child Lock icon blinks.)
3. Operations after activating the Child Lock function.
   - Even if the Child Lock function is activated, every button works until the door opens.
   - When you open the door during the Child Lock is being activated, the alarm sounds and an error message appears. In 30 seconds, draining begins automatically. However, if you close the door within 30 seconds, water will not be drained. (Displayed error message "CL", "dE").
   - To add laundry after activating the Child Lock function, you must deactivate the Child Lock function.
4. To deactivate the Child Lock function, press and hold both the Rinse and Spin buttons simultaneously for 3 seconds again. (If the Child Lock function is deactivated, the Child Lock icon is turned off.)
5. To clear "CL" display, after draining is complete, close the door of the washing turn the power off and then on.

CAUTION
- This function is for preventing injury and malfunction of the product because of inappropriate operations or actions by children, the elderly or the frail.
- If the door opens when the Child Lock function is activated, the water is drained by force to prevent children from drowning.

- To add laundry after activating the Child Lock function, you must deactivate the Child Lock.
- Even if the power is turned off and then on when the Click Lock is activated, the Child Lock remains activated.
- Once Child Lock is activated, even when the power is turned off, if the door is opened, water is automatically drained in 30 seconds.
- The Child Lock function cannot be deactivated when CL is displayed. (However, the Child Lock function can be deactivated when the dE error is displayed.)

WA80SPWFP-02817E-01_EN.indd 14 2013-01-15 11:48:03

manual functions

Possible to select the function for each program.
(Example) For a simple washing as the little dirt program :
Power → Select the little dirt program → Wash → Start/Pause

WASH ONLY

Press the **Power** button.
Press the **Wash** button.
Press the **Start/Pause** button.
When the **Wash** button is pressed during washing, the wash time can be changed to between 6 and 30 minutes in duration.

RINSE ONLY

Press the **Rinse** button.
Press the **Start/Pause** button.
Rinsing goes on for 2 times.
When the **Rinse** button is pressed during rinsing, the rinse times can be changed to between 2 to 5 times in duration.

SPIN ONLY

Press the **Spin** button.
Press the **Start/Pause** button.
When the **Spin** button is pressed during spinning, the spin time can be changed to from 1 to 9 minutes.

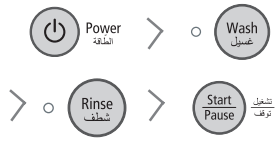

WASH AND RINSE

Press the **Wash** and **Rinse** button.
Press the **Start/Pause** button once.
Detects the amount of laundry, and determines wash and rinse time period automatically.
When the **Wash** and **Rinse** button is pressed during working.
Wash time period is determined between 6 and 30 minutes, and rinse time is determined between 1 and 5 times.

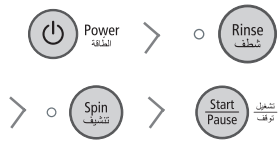

RINSE AND SPIN

Press the **Rinse** and **Spin** button.
Press the **Start/Pause** button once.
Rinsing and spin drying follow.
When the **Rinse** and **Spin** button is pressed during working. The number of rinse times is determined between 2 and 5, and spin time period for drying is determined between 1 and 9 minutes.

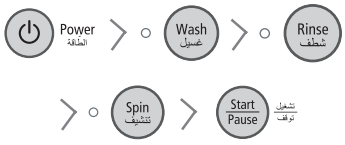

WASH, RINSE AND SPIN

Press the **Wash**, **Rinse** and **Spin** button.
Press the **Start/Pause** button once.
Wash, **Rinse** and **Spin** is performed.

WA80SPWFP-02817E-01_EN.indd 15 2013-01-15 11:48:03

installation & maintenance

The User's Manual is for common use.
Make use of the User's Manual depending upon your washing machine model.

ENVIRONMENT

Leave some space
Maintain at least 10cm between the washer and the wall.
Place the washer on a sturdy flat surface.
If the washer is placed on an uneven or weak surface, noise or vibration occurs. (Allowable is 1°)
Adjust the legs for even placement.
Never install the washer near water.
Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.
Avoid direct sunlight or heaters.
As plastic an electrical components are affected by direct heat, never place the washer near furnaces, boilers, etc. Do not place under direct sunlight.
All packing materials should be disposed of in an environmentally suitable manner.

LEVELLING

- If the washer is not leveled with the ground, it makes the machine tremble more or be out of order. So, make sure that the washer is leveled properly.

SEE IF THE MACHINE IS PLACED LEVEL BY CHECKING THE POSITION OF THE WASHING TUB.

- Open the lid of the machine, pour water into the tub up to the level just below the pulsator, and adjust the legs so that the pulsator is positioned at the center of the water as shown in the figure.
- Place the machine more than 10cm away from the wall.
- Adjust the legs on feet for levelling.

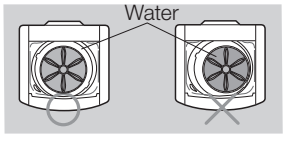

WA80SPWFP-02817E-01_EN.indd 16 2013-01-15 11:48:04

CONNECTING THE WATER SUPPLY HOSE

1. Remove the adaptor from the water supply hose.



2. First, using a "+" type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part(b) following the arrow for gap about 5 mm between them.

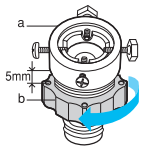

3. Connect adaptor to the water tap by tightening the screws firmly. Then, turn part(b) following the arrow and put (a) and (b) together.

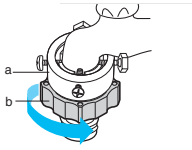

4. Connect the water supply hose to the adaptor. Pull down the part (c) of the water supply hose. When the part (c) is released, the hose is automatically connected to the adaptor making a 'click' sound.



5. Connect the other end of the water supply hose to the inlet water valve at the back of the washer. Screw the hose clockwise all the way in.

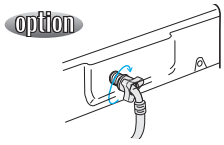

5-1. Connect the other end of the water supply hose to the inlet water valve at the top of the washer. Screw the hose clockwise all the way in.

- If the water tap is a screw type, assemble a water supply hose that fits to the tap as shown. After completing connection, if water leaks from the hose, then repeat the same steps.

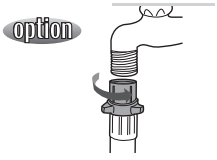

After completing connection, if water leaks from the hose, then repeat the same steps.
Use the most conventional type of faucet for water supply.
In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.

WA80SPWFP-02817E-01_EN.indd 17 2013-01-15 11:48:04

HOW TO CONNECT THE DRAIN HOSE

In case of pump-drained washer

- Attach the drain hose to the rear of the washer.
  Install the clamp on the drain hose and tighten to prevent leakage of water.

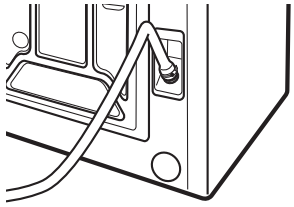

- Install the drain hose in the position of about 90~100cm above the ground.

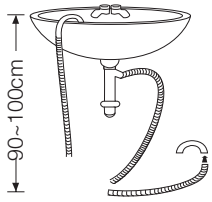

CAUTIONS WHEN INSERTING THE DRAIN HOSE(IN CASE OF GENERAL WASHER)

1. Don't exceed more than 3m when the drain hose is used by connecting with other hoses.

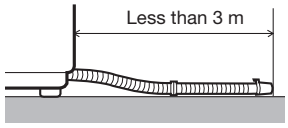

2. Be careful to drain water out at the end of the drain hose.

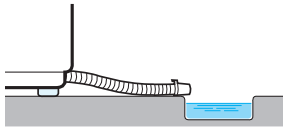

3. The doorsill shoudn't be more than 5cm.

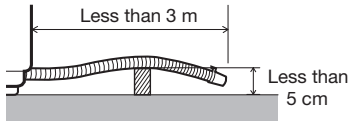

4. Don't install the drain hose underneath the wash machine.

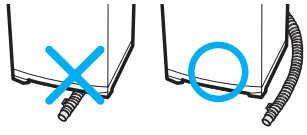

WA80SPWFP-02817E-01_EN.indd 18 2013-01-15 11:48:05

ASSEMBLING THE VERMIN PROTECTION PANEL option

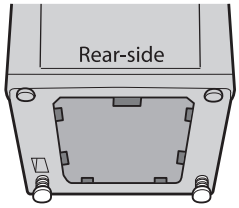

1. It is easier engaging the shutter when the set is lifted up a little, as shown in the figure below.

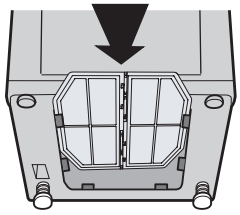

2. Insert the shutter completely through the engagement hole from the back.

HOW TO PUT THE DETERGENT IN

1. Open the detergent box by pulling in the direction of the arrow as shown in the figure and then put the powder detergent in the detergent box.

2. Put in one-time amount of detergent evenly so the detergent may not brim over the box.

HOW TO ADD THE FABRIC SOFTENER

Slide and open the cover in the direction of the arrow, insert the rinse detergent, and slide and close it in the reverse direction.

- When a proper amount (one time does) of fabric softener is stored in the softener inlet,it is automatically put in at the last rinsing cycle.
- Do not use detergent, bleach or starch into the Softener Inlet.
- Using too much softener may produce unsatisfactory results.
- Do not open the lid during the Spin Dry cycle. If added too early, its effectiveness will decrease.
- Do not leave the softener into the Softener Dispenser for a long time. Because softner became stiff.

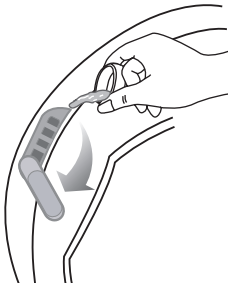

WATER SUPPLY CONNECTOR FILTER

1. Pull out the filter and wash well.

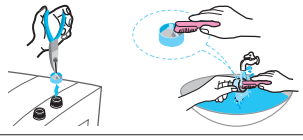

2. Pull in the filter and connect the hose to the inlet water valve tightly.

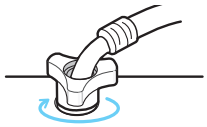

3. Check if there is a leakage.
Note to tighten up the connector.

WA80SPWFP-02817E-01_EN.indd 19 2013-01-15 11:48:05

installation & maintenance

CLEANING THE FILTER

Clean the filter net often to keep the washer clean.

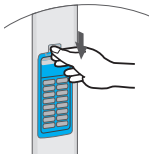

1. Push the upper part of the Magic filter and pull in.

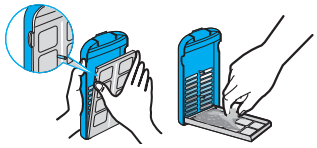

2. Open the cover as shown in the figure.

3. Clean the Magic filter.

4. Close the cover and insert the lower part of the filter in the basket first and then push the filter with “click” sound.

CLEAN THE PUMP FILTER

1. Place a rag or towel under the wash filter to avoid wetting the floor, and rotate the filter counterclockwise and pull it out.
2. Remove any dirt from the filter.
3. Return the filter to its place by rotating the filter clockwise until it locks into position.

1

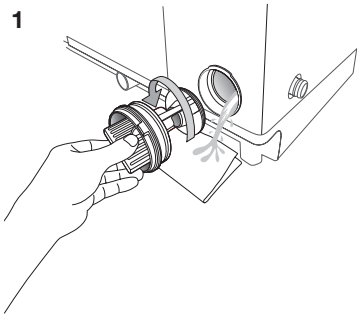

2

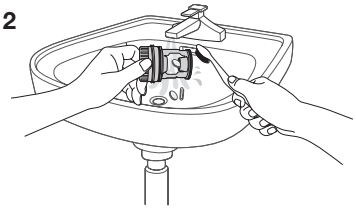

3

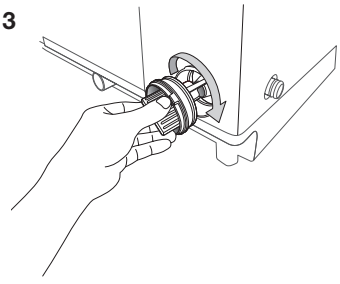

WA80SPWFP-02817E-01_EN.indd 20 2013-01-15 11:48:06

troubleshooting

PROBLEM	CHECK
Washing machine won't work	- Is the water tap opened? - Is the washer plugged in? - Is the power cut off? - Is there enough water?
Water dose not drain	- Is the drain hose down?(No pump) - Is the drain hose frozen? - Is the drain hose clogged? - If the water dose not drain in 15 minutes, a buzzer will sound, and the remaining time indicator will show "5E". 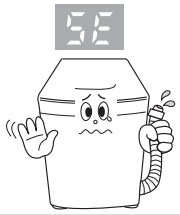
Water is not supplied	- Is the water tap opened? - Is the water cut off? - Is the water supply hose or hose connection clogged? - Is the water tap frozen? - If the water supply is not finished in 1 hour or there is no change in the water level 4 minutes after the water supply has started, the buzzer rings and "4E" is displayed on the remaining time indicator. 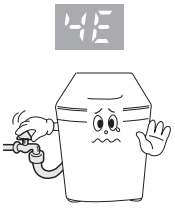
Spinning does not work	- Is the laundry spread out evenly in the washer? - In the washer set on a sturdy flat surface?
Water is overflowed	- Restart after spinning. - If the error sign still indicates, call agency.
This indicates that a Child Lock error occurred	- The error message blinks at a 1 second interval and the water is drained with an alarm sound. Draining cannot be stopped. (Displayed message: "CL" or "dE") - This function is to prevent children from drowning when falling into the wash tub. When draining is complete and you turn the power off and then on, the washing machine will operate normally. - To clear "CL" display, after draining is complete, close the door of the washing machine, turn the power off and then on.

WA80SPWFP-02817E-01_EN.indd 21 2013-01-15 11:48:07

washing machine won't work?

PROBLEM	CHECK & SOLUTION
The power is cut off.	Is the electric voltage normal?
	Is the washer plugged in? Plug in the electric cord. ➲ Water does not drain.
	Is the drain hose down? Put the drain hose down.
	Is the drain hose folded? Unfold the drain hose.
	Is the drain hose outlet clogged? Remove the waste cleanly.
Washing machine won't work.	Is the washer lid open? ➲ Close the lid.
	Is the Pause button on? ➲ Press the Start/Pause button one more time and check if the washer starts.
	Is enough water filled to the water level? ➲ If the water pressure is low, it takes a long time to start washing.
	Is the faucet closed? ➲ Open the faucet to supply water.
If the drain hose and spin basket are frozen, do as follows.	• Add hot water to the frozen water tap and remove the drain hose. Soak into hot water. • Pour hot water into the spin basket for about 10 minutes. • Put a hot water towel on the drain hose connector. • If the drain hose defrosts, connect again and check for proper water draining.
The water drains out immediately.	• The drain is clogged with coins or pins. The drain hose is hung over the drain hose hook. Half fill the spin basket with water and try for spinning again.
The water leaks at the water supply hose connector.	If the faucet connecting part is loose, water may leak. ➲ Repeat the assembling steps again. (Refer to "Connecting the water supply hose")
	Check if the rubber packing of water supply hose is in the right position. ➲ Screw tightly again.
	Is the water supply hose folded? ➲ Unfold the hose.
	If the water supply is too strong, water may leak. ➲ Close the faucet a little.
	Is water leaking from the faucet itself? ➲ Fix the faucet. Water is not supplied.
	Did you press the Start/Pause button after selecting the water supply? ➲ If the Start/Pause button is not pressed, water is not supplied. Press the Start/Pause button.
	Is the faucet closed? ➲ Turn on the faucet.

WA80SPWFP-02817E-01_EN.indd 22 2013-01-15 11:48:07

PROBLEM	CHECK
The water leaks at the water supply hose connector.	Is the filter net at the water supply hose connector clogged with dirty matters? ➲ Clean the filter net by brushing with a toothbrush.
	Is the water supply cut off? ➲ If the water supply is suspended, turn off the faucet and power off.
Spinning makes loud noises and vibrations.	Check if the laundry is spread evenly in the washer. ➲ Spread out the laundry evenly and start again.
	Check if the washing machine levels on a sturdy flat floor. ➲ Set the machine at level.
	Is the handle for leveling legs loose? ➲ Adjust the legs on the feet for leveling.
	Is around the washing machine filled with unnecessary stuffs? ➲ Remove those unnecessary things away from the wash machine.

specification

SW80SP

POWER CONSUMPTION	WASH	470 W	STANDARD WATER LEVEL	MAXIMUM	80 ℓ
	SPIN	280 W		MID	57 ℓ
DIMENSIONS(mm)		W601 X D665 X H1058(HIGH BASE) W601 X D665 X H1033(LOW BASE)		MID LOW	41 ℓ
WEIGHT		44 kg		EXTRA LOW	30 ℓ
WATER PRESSURE		0.05~0.78 MPa (0.5 ~ 8.0 kg·f/cm^2)	WATER USAGE		227 ℓ
WASHING TYPE		Stirring Type	SPIN SPEED		720 rpm

✻ The energy label specifications have been determined by using the following program accordiing to SASO 2692 and SASO 2693.

- The program for SW80SP is Energy Saving + High Water Level + Cold&Hot.

WA80SPWFP-02817E-01_EN.indd 23 2013-01-15 11:48:07

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
Saudi Arabia	9200-21230	www.samsung.com

Code No. DC68-02817E-01_EN

SW80SP

غسالة أوتوماتيك
دليل المستخدم

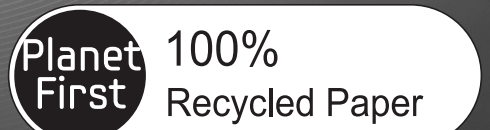

تم تصنيع هذا الدليل من ورق معاد تدويره بنسبة 100%.

إمكانيات هائلة

شكراً لشرائك أحد منتجات Samsung.
للحصول على خدمة أكثر تكاملاً، الرجاء تسجيل المنتج على موقع
www.samsung.com/register

SAMSUNG

كود رقم. DC68-02817E-01_AR

WA80SPWFP-02817E-01_AR.indd 1 1/15/2013 12:34:07 PM

الميزات

١. Energy Saving (توفير الطاقة)
تعمل هذه الدورة على توفير الطاقة عند استخدام الغسالة.
تمت المصادقة على اختبار أداء الغسالة والفاقد منها من قبل الهيئات المعنية المسجّلة.

٢. شلال مائي
إزالة أي بقايا بفعالية - حيث يعمل هذا الشلال على توزيع مسحوق الغسيل بشكل أكثر فعالية لترك أقل بقايا ممكنة.
يقلل شلال الماء الجيد الذي يتم توزيعه على الغسيل كمية الماء المستخدمة.

٣. حاوية ماسية
تُحدث الحاوية الماسية ضغطاً عالياً من الماء مما يعمل على إزالة الأوساخ من الملابس بشكل فعّال. تقلل الحاوية الماسية من إلحاق الضرر بالأقمشة مما يعمل على زيادة عمر الأقمشة. يتميز الحوض الداخلي البراق بأنه رائع وقوي في تأثيره على الغسيل.

٤. تحكم ذكي (Fuzzy Control)
تعمل ميزة التحكم "الذكي" على تشغيل أفضل دورة غسيل من خلال تقدير حِمل الملابس فيما يشبه الذكاء الاصطناعي.

٥. المضخة القوية المزدوجة - تشابك أقل وأداء أفضل للغسيل
عدم التشابك - تساعد تيارات الماء متعددة الاتجاهات على عدم تشابك الملابس.
صُممت تقنية تيارات الماء خصيصًا لتحسين أداء عملية الغسيل. تضمن قوة تيارات الماء الأشبه بالإعصار والمتعددة الاتجاهات الحصول على أداء فائق للغسيل.

٦. المصفاة الفعالة
تضمن لك هذه "المصفاة الفعالة" الفريدة حجز كافة النسالات الموجودة داخل حوض الغسيل، مما يرفع كفاءة عملية التصفية للحصول على نتائج فعّالة للتنظيف.

٧. وظيفة Child-Lock (التأمين ضد عبث الأطفال)
يساعد هذا الجهاز على حماية الأطفال من التعرض للأذى دون قصد أثناء اللعب بالغسالة.
(لمزيد من المعلومات راجع الصفحة ١١ و١٤.)

WA80SPWFP-02817E-01_AR.indd 2 1/15/2013 12:34:07 PM

معلومات السلامة

ستلاحظ، في كثير من المواضع في هذا الدليل، وجود علامات تحذير ⚠ وتنبيه ⚠. لا تغطي التحذيرات والتنبيهات وإرشادات الأمان الهامة التالية كافة الأحوال والمواقف المحتمل التعرض لها. لذا تقع عليك مسؤولية التنبه جيداً والحذر والعناية أثناء تركيب الغسالة وصيانتها وتشغيلها. لا تتحمل شركة Samsung أي مسؤولية تجاه الأضرار الناجمة عن سوء الاستخدام.

الرموز والاحتياطات الهامة للسلامة

تشير الرموز والعلامات في هذا الدليل إلى ما يلي:

تحذير	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى إصابات جسدية بالغة أو الوفاة**.
تنبيه	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى إصابات طفيفة للأفراد أو تلف الغسالة**.
تنبيه	لتقليل خطر حدوث حريق أو انفجار أو صدمة كهربائية أو إصابة جسدية عند استخدام الغسالة، اتبع احتياطات السلامة الأساسية التالية:

	ممنوع المحاولة.
	ممنوع الفك.
	ممنوع اللمس.
	اتبع الإرشادات بعناية.
	قم بفصل موصل الطاقة من مقبس الحائط.
	تأكد من توصيل الغسالة بمأخذ أرضي لمنع حدوث صدمة كهربائية.
	اتصل بمركز الخدمة للمساعدة.

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.
لذا يرجى اتباعها بعناية.
بعد الاطلاع على هذا الدليل، قم بحفظه في مكان آمن للاستناد إليه كمرجع في المستقبل.

اقرأ كافة الإرشادات أولاً قبل استخدام الجهاز.

كأي جهاز يعمل بالكهرباء وبه أجزاء يمكن تحريكها، فهناك احتمال للتعرض لبعض المخاطر. ولتشغيل هذا الجهاز بأمان، يجب عليك التعرّف على طريقة تشغيله وتوخي الحذر عند استخدامه.

قم بتركيب الغسالة ووضعها في مكان مغلق، حتى لا تتعرض لعوامل الطقس.

قم بتركيب الغسالة وضعها في وضع مستوٍ على أرضية تتحمل وزنها.

يجب توصيل الغسالة بمأخذ أرضي بشكل صحيح. لا تقم بتوصيلها بأي مأخذ غير أرضي.

ضع الغسالة بمكان يسمح بالوصول إلى مقبس الحائط بعد استكمال عملية التركيب.

WA80SPWFP-02817E-01_AR.indd 3 1/15/2013 12:34:07 PM

معلومات السلامة

تنبيه

لتقليل مخاطر حدوث حريق أو انفجار:

- لا تقم بغسل الملابس التي تم غسلها أو غمسها أو معالجتها باستخدام الجازولين أو مذيبات التنظيف الجاف أو المواد الأخرى القابلة للاشتعال أو الانفجار. لأنها تحدث أبخرة يمكن أن تسبب اشتعال أو انفجار. يجب القيام بإجراء شطف يدوي لأية ملابس قد تعرضت لمذيبات تنظيف أو أية سوائل أو مواد صلبة أخرى قابلة للاشتعال قبل وضعها في الغسالة. تأكد من التخلص من كافة آثار تلك المواد السائلة والصلبة والأبخرة. تتضمن المواد الخطرة الأسيتون، والمواد الكحولية، والجازولين، والكيروسين، وبعض المنظفات المنزلية السائلة، ومزيلات البقع، والزيوت الترينتينة، والشمع، ومزيلات الشمع.
- ممنوع وضع الجازولين أو مذيبات التنظيف الجاف أو أية مواد أخرى قابلة للاشتعال أو الانفجار في الغسالة.
- قد يصدر غاز الهيدروجين في نظام الماء الساخن في ظروف معينة - كما هو الحال بالنسبة لسخان الماء لديك - الذي لم يُستخدم لمدة أسبوعين أو أكثر. غاز الهيدروجين قابل للانفجار. في حالة عدم استخدام نظام الماء الساخن لمدة أسبوعين أو أكثر، قم بتشغيل كافة الصنابير الموجودة في المنزل، ودع الماء يتدفق لدقائق قبل استخدام الغسالة. يعمل ذلك على التخلص من غاز الهيدروجين الذي تم تكوينه داخل الصنابير. حيث أن غاز الهيدروجين قابل للاشتعال، فلا تقم بالتدخين أو إشعال أي مصدر لهب مفتوح في ذلك الوقت.

قم بالتهوية على الفور دون لمس القابس في حالة تسرب الغاز.

قم بفصل سلك الطاقة قبل صيانة الغسالة.

لا تصل إلى داخل الجهاز أثناء حركة حوض الغسيل.

لا تحاول لمس أسفل الجهاز بيديك أو باستخدام أي أداة، قد يؤدي ذلك إلى إصابتك بواسطة قطع التنشيف الموجودة أسفل الغسالة.

تنبيه

لا تدع الأطفال يقومون باللعب فوق الغسالة أو بداخلها. قد يُصاب الأطفال بجروح خطيرة في حالة احتباسهم بداخلها.

تنبيه

لا تدع الأطفال يحاولون النظر داخل الغسالة حيث أن سقوطهم فيها يشكل خطراً كبيرًا وقد يؤدي إلى عواقب وخيمة.

تنبيه

لم يتم تصميم هذا الجهاز للاستخدام من قِبل أشخاص لديهم نقص في قدرات جسدية أو عقلية أو حسية (بما فيهم الأطفال) أو نقص في المعرفة أو الخبرة، إلا تحت إشراف أو تعليمات لاستخدامه من قِبل الشخص المسؤول عن سلامتهم.

يجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

لا تقم بإصلاح أي جزء من الغسالة أو استبداله أو صيانته بنفسك ما لم تكن على دراية كاملة بإرشادات الإصلاح الموصى بها بالنسبة للمستخدم وتتوافر لديك مهارات تنفيذها. قد تؤدي عملية الإصلاح من قِبل شخص غير معتمد إلى إلغاء الضمان.

قم بتخزين منظفات الغسيل والمستلزمات الأخرى للغسيل في مكان بارد وجاف بعيداً عن متناول الأطفال.

قم بفصل الخراطيم وغلق المياه عند عدم استخدام الغسالة.

في حالة تلف سلك التيار الكهربي، يجب تغييره من قبل الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض لأي خطر.

لا تقم بثني كبل التيار الكهربي بقوة أو وضع أية أشياء ثقيلة عليه.

لا تلمس سلك التيار الكهربي بيدين مبتلتين.

لا تقم بالتحميل الزائد على منفذ التيار الكهربي بتوصيل عدد كبير من الأجهزة به.

WA80SPWFP-02817E-01_AR.indd 4 1/15/2013 12:34:07 PM

لا تقم بتركيب الغسالة بالقرب من المعدات الكهربائية. كما لا تقم بوضع أية شموع أو سجائر على الغسالة.

لا تقترب من الغسالة إذا فاض الماء بها أو قلَّ عن المنسوب الافتراضي؛ حيث يؤدي هذا إلى احتمال حدوث صدمة كهربية. قم بفصل الغسالة وتصريف الماء تماماً.

تنبيه

لا تقم بالجمع بين مادة التبييض من الكلور، أو الأمونيا، أو الأحماض (مثل الخل أو مزيل الصدأ) في نفس عملية الغسيل. حيث تتسم الأدخنة التي يمكن تكوينها عند تفاعل تلك المواد مع بعضها بخطورتها.

لا تقم بغسل المواد المصنوعة من الألياف الزجاجية. يمكن أن تلتصق الجزيئات الصغيرة بالأقمشة التي سيتم غسلها لاحقاً، مما قد يتسبب في حدوث التهابات جلدية.

إذا تم توصيل هذا الجهاز بالتيار الكهربي من خلال وصلة سلك كهربي أو مشترك كهربي، يجب وضع وصلة السلك الكهربي أو المشترك الكهربي بشكلٍ لا يجعله عرضة للبلل أو الرطوبة.

تحذير

قبل بدء استخدام الغسالة، قم بإزالة الغطاء حتى لا يحتبس الأطفال أو الحيوانات الصغيرة بداخلها.

قم بتوصيل الغسالة بمصدر المياه الرئيسي باستخدام مجموعة جديدة من الخراطيم. ممنوع إعادة استخدام مجموعة خراطيم قديمة.

تتأثر خراطيم صنبور الماء بمرور الوقت. لذا يجب فحص الخراطيم بشكل دوري للتحقق من عدم وجود انتفاخات أو التواءات أو قطع أو تآكل أو تسرب، واستبدالها حسبما تقتضي الحاجة وكل خمس سنوات على الأقل.

قم بتفريغ جيوب الملابس قبل كل غسلة. حيث يمكن أن تتسبب الأشياء الصلبة ذات الأشكال غير المنتظمة مثل العملات المعدنية، والشفرات، والدبابيس، وماسكات الورق في تلف الغسالة. لا تقم بغسل الملابس المزودة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

في حالة عدم توقف الغسالة عن العمل في غضون ١٥ ثانية بعد قيامك بفتح الغطاء، اتصل بوكيل الصيانة على الفور.

قم بتوصيل السلك الأرضي باللوحة الأساسية وتخبئته تحت عمق ١٠ بوصة (٢٥ سم) تقريباً تحت الأرض: أو يمكنك كبديل لذلك توصيل السلك الأرضي بفتحة مناسبة بمقبس الطاقة الأرضي. يحظر توصيل السلك بسلك هاتف أو قضيب البرق أو أنبوب غاز.

بالنسبة للغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.

تنبيه

تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط.
يُعد استخدام المنتج لأغراض تجارية سوء استخدام له. وفي هذه الحالة، لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung، كما أن شركة Samsung لا تتحمل أية مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

يجب عدم وضع الغسالة في مكان او غرفة رطبة

WA80SPWFP-02817E-01_AR.indd 5 1/15/2013 12:34:07 PM

المحتويات

إعداد الغسالة ٧

٧ وصف الأجزاء
٨ التحقق من السلامة قبل الغسيل والاعتناء بالملابس
١٠ تعتمد طريقة الغسل بشكل تلقائي على نوعية الغسيل
١١ لوحة التحكم
١٢ البرنامج Fuzzy (ذكي)
١٢ البرنامج Quick (سريع)
١٢ برنامج Super Clean (نظافة قصوى)
١٣ برنامج Energy Saving (توفير الطاقة)
١٣ الحفاظ على الحوض نظيفًا
١٣ دورة Wool (صوف)
١٣ الدورة Blanket (بطانية)
١٣ البرنامج Delicate (رقيق)
١٤ Delay Start (تأجيل التشغيل)
١٤ Memory (ذاكرة)
١٤ Child Lock (التأمين ضد عبث الأطفال)

وظائف يدوية ١٥

١٥ وظائف يدوية

التركيب والصيانة ١٦

١٦ البيئة
١٦ الاستواء
١٧ توصيل خرطوم توريد الماء
١٨ كيفية توصيل خرطوم التصريف
١٨ في حالة استخدام غسالة ذات مضخة تصريف
١٨ تنبيهات حول إدخال خرطوم تصريف الماء (في حالة الغسيل العام)
١٩ تركيب لوحة الحماية من الحشرات
١٩ كيفية إضافة المسحوق
١٩ كيفية إضافة منعم الأقمشة
١٩ مصفاة وصلة توريد الماء
٢٠ تنظيف المصفاة
٢٠ تنظيف مصفاة المضخة

استكشاف المشاكل وحلها ٢١

٢١ استكشاف المشاكل وحلها

الغسالة لا تعمل؟ ٢٢

٢٢ الغسالة لا تعمل؟

المواصفات ٢٣

٢٣ المواصفات

WA80SPWFP-02817E-01_AR.indd 6 1/15/2013 12:34:07 PM

إعداد الغسالة

وصف الأجزاء

دليل المستخدم مخصص للاستخدام العام.
استعن بدليل المستخدم الخاص بطراز الغسالة الموجودة لديك.

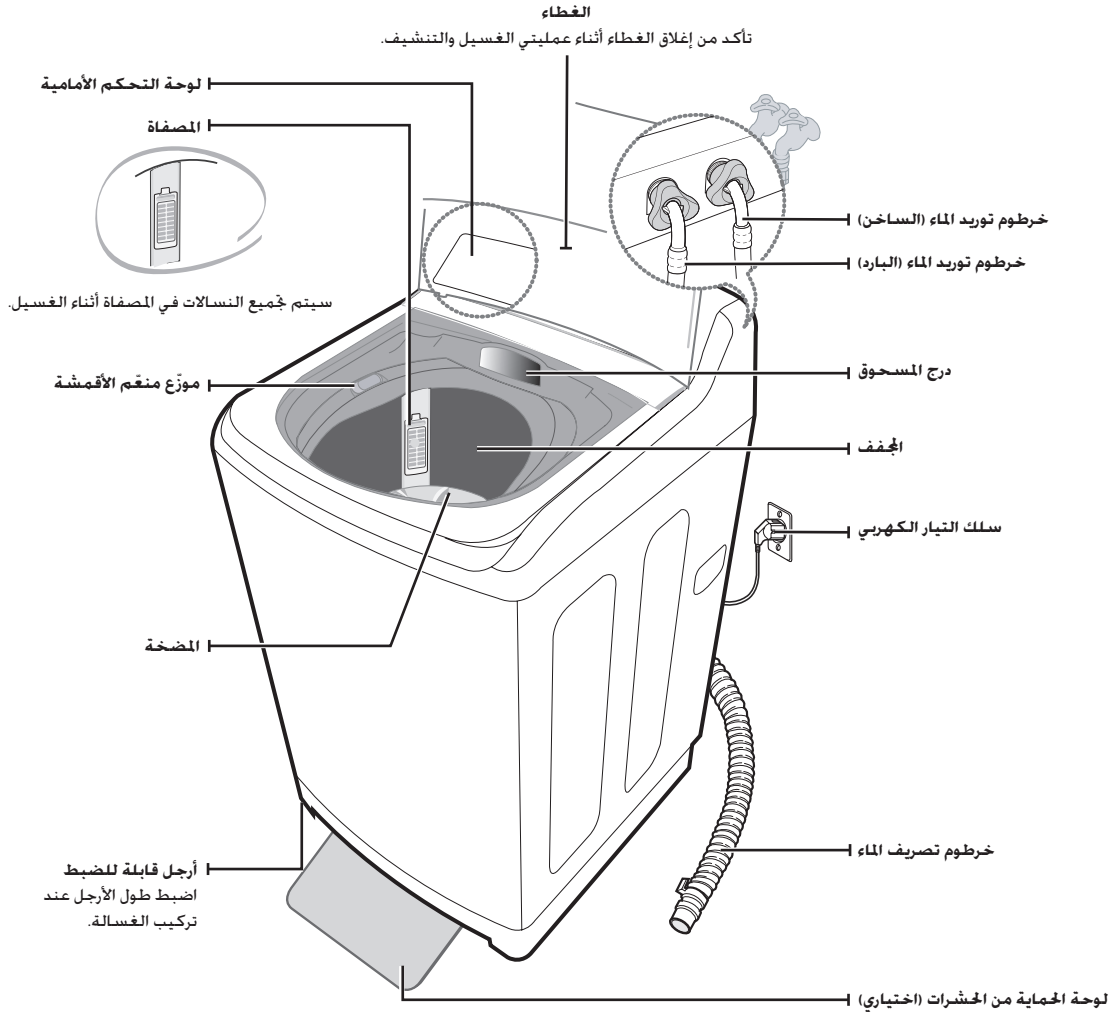

WA80SPWFP-02817E-01_AR.indd 7 1/15/2013 12:34:08 PM

إعداد الغسالة

التحقق من السلامة قبل الغسيل والاعتناء بالملابس

يجب إتباع تعليمات الفحص لتجنب المشاكل التي قد تواجهها أثناء استخدام الغسالة أو التلفيات التي قد تصيب الملابس.

- إذا حدثت المشاكل المدرجة أدناه بسبب أخطاء من العميل، يتم تحصيل مصاريف خدمة إضافية.

تعليمات الفحص المتبعة قبل بدء الغسيل

تحقق إذا كانت الملابس تبهت أم لا.

- أضف المنظف السائل إلى منشفة بيضاء وقطعة الملابس بحيث لا يمكنك ملاحظته. ثم قم بدعكهما معاً بقوة. تحقق مما إذا كان اللون قد انتقل إلى المنشفة أم لا.
- تعامل بحذر مع الوشاحات والملابس المستوردة حيث أنها تفقد لونها بسهولة.
- تحقق مما إذا كان يوجد أية بقع أو أوساخ بالملابس.
- في حالة العثور على بقع، استخدم منشفة رطبة عليها مسحوق غسيل وادعكها في اتجاه واحد.
- قبل الغسيل، يجب القيام بمعالجة أولية للأكمام، والياقات، وثنيات الفساتين والجيوب بالتنظيف بفرشاة عليها مسحوق.

يتم التعامل مع الأقمشة المصنوعة من الصوف والمعالجة ضد التجعيد بشكل خاص، وذلك بتثبيتها بالخيوط قبل الغسيل. تتم إزالة هذه الخيوط بعد جفاف الملابس.

الملابس غير القابلة للغسيل

الملابس التي تتأثر بسهولة حتى بالنقع في الماء.

- حتى بالنقع في الماء، يمكن أن يحدث تغيير في أربطة العنق وحمالات الصدر والسترات والبدل والمعاطف فقد تنكمش هذه الملابس أو يتغير لونها الخارجي وذلك لأن معظمها مصنوع من الحرير الصناعي والفسكوز والألياف ومشتقاتها من الألياف المختلطة.
- يمكن أن تتغير ألوان الأقمشة المعالجة أو المنقوشة أو الصناعية حتى بمجرد النقع في الماء.
- وتعتبر الأقمشة المصنوعة من القطن والصوف والحرير المعالج والمنتجات الجلدية والأدوات المصنوعة من الجلود والملابس المزينة بالجلد من المنتجات التي تفقد لونها بسهولة.
- لا تغسل تلك الملابس دون معرفة إرشادات الاستخدام أو المنتج التي توضح كيفية التعامل معه.

حول مسحوق الغسيل

- عندما يكون مسحوق الغسيل لا يذوب جيداً، استخدم الماء الدافئ (حوالي ٤٠ درجة مئوية) لإذابة المسحوق.

تنبيه

- استخدم كمية ملائمة من مسحوق الغسيل.
- حتى إذا تم الإفراط في استخدام مسحوق الغسيل، فلن تختلف النتيجة بعد الغسيل. فقد يؤدي ذلك إلى تلف الملابس لعدم شطفها بدرجة كافية.
- قد تتسبب مواد التبييض في إتلاف الملابس حيث إنها مواد شديدة القلوية.
- اشطف الملابس بالشكل الكافي حيث أن بقاء المسحوق عليها يسبب روائح كريهة.
- إذا تم استخدام المسحوق بإفراط أو كان الماء المستخدم بارداً، فلن يذوب المسحوق بالكامل وسيظل في الملابس أو الخرطوم أو المجفف مما يسبب تلوث الملابس.
- في حالة وجود غسيل متبقٍ، يجب وضع المسحوق في درج المسحوق. قد يؤدي توزيع مسحوق الغسيل على الغسيل بشكل مباشر إلى تلطخ الألوان.

WA80SPWFP-02817E-01_AR.indd 8 1/15/2013 12:34:08 PM

العناية بالملابس قبل الغسيل

أخرج المتعلقات الشخصية من الجيوب.



- تنبيه. افحص الجيوب! تتسبب بنس الشعر والعملات المعدنية في تلف الملابس والغسالة. حيث أنها تسبب ضوضاء ومشاكل للغسالة. يجب فحص الجيوب.

إذا تُركت سوست السراويل مفتوحة أثناء الغسيل، فإن هذا قد يتسبب في تلف المجفف. يجب غلق السوست وتثبيتها بخيط قبل الغسيل.

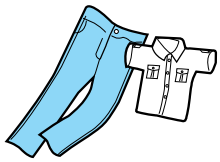

- قد تؤدي المعادن الموجودة على الملابس إلى تلف هذه الملابس وحوض الغسيل.
- اقلب الملابس المزينة بالأزرار والمطرزة على ظهرها قبل الغسيل.
- قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل الغسيل.

غير مسموح بوضع الملابس المقاومة للماء (لباس التزحلق على الجليد وحفاضات الأطفال والدواسات) في الغسيل.

- قد يؤدي ذلك إلى إخراج الغسيل أو اهتزاز الغسالة بشكل غير طبيعي، مما قد يؤدي إلى إلحاق إصابات بالأشخاص أو تلف بالغسالة أو الأرضية أو الملابس. (الحفاضات والملابس المقاومة للماء ومعاطف المطر وأغطية المظلات وملابس التزحلق على الجليد وأغطية السيارات وحقائب النوم، إلخ).
- عند دوران الحوض، قد يبقى الماء داخل الملابس أو الأقمشة المقاومة للماء وقد يتجمع في أحد الأركان مما يؤدي إلى اهتزاز الغسالة بشكل غير طبيعي. وقد يرتفع الغسيل ويخرج من الغسالة مما يؤدي إلى إلحاق إصابات بالأشخاص.

انفض الأوساخ والأتربة عن الملابس.

- يؤدي دعك الأتربة وحبيبات الرمل المتراكمة على الملابس الرقيقة إلى تعريضها للتلف والحصول على نتائج غير مرضية بعد الغسيل.

قم بعملية غسيل أولية للجوارب والأكمام والياقات البيضاء قبل تشغيل دورة الغسيل الأساسية.

- لإزالة أي بقع أو أوساخ على الياقات والأكمام والثنيات والجيوب، ضع بعض من مسحوق الغسيل عليها وافركها باستخدام برفق قبل الغسيل.
- يمكن استخدام المنظفات السائلة أو المساحيق. لا تستخدم الصابون فقد يتسخ الحوض من الأوساخ الموجودة عليه.

اقلب ملابس الرضع تلك على ظهرها قبل الغسيل.

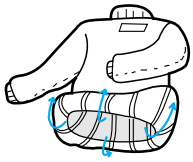

- إذا كانت الملابس بها أوساخ خارجية، يجب فصلها قبل الغسيل. حيث قد تعلق هذه الأوساخ (الأوساخ والخيوط) بالملابس الأخرى.
- اغسل الملابس السوداء والمناشف القطنية كلاً على حدة. إذا تم غسلها معاً، قد تعلق الأوساخ بالمناشف. افحص الملابس قبل الغسيل.

قد تسبب غسيل الملابس الكشميرية وذات الأحجام الكبيرة والأوزان الخفيفة (على سبيل المثال الملابس ذات التطريز البسيط، والملابس النسائية، والمنسوجات المصنوعة من النيلون والأقمشة الصناعية، إلى آخره) في إلحاق الضرر بالملابس نفسها كما قد تتسبب في مشاكل لجهاز الغسالة. استخدم شبكة الغسيل أو اغسلها على حدة.

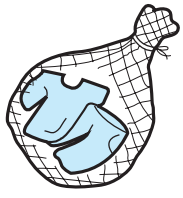

- يجب وضع الملابس المزينة بالخيوط، والدانتيل، وملاءات الأسّرة، والملابس الصوفية في شبكة غسيل قبل وضعها في الغسالة.
- ضع الملابس الصوفية في شبكة غسيل.
- لا ستخدم سوى شبكات الغسيل التجارية في عملية الغسيل.

يجب ضغط الستائر والملابس الخفيفة والجينز بدفعها في الماء حتى لا تطفو فوق سطح الماء.

- في حالة طفو هذه الملابس فوق سطح الماء، اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) لإيقاف التشغيل ثم اضغط على تلك الملابس حتى يغمرها الماء. إذا استمرت عملية الغسيل والملابس طافية فوق سطح الماء، قد يتسبب ذلك في إلحاق الضرر بالملابس والغسالة علاوة على الحصول على نتائج غير مرضية بعد الغسيل.

WA80SPWFP-02817E-01_AR.indd 9 1/15/2013 12:34:08 PM

إعداد الغسالة

تعتمد طريقة الغسل بشكل تلقائي على نوعية الغسيل

قبل بدء عملية الغسيل، تحقق مما يلي:

- صل خرطوم توريد الماء بصنبور الماء. اترك الصنبور مفتوحاً. قم بتوصيل سلك التيار الكهربائي. تأكد من أن اتجاه خرطوم التصريف لأسفل.

الغسل للمرة الأولى

قبل غسل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة دون ملابس.

للقيام بذلك:

١. اضغط على الزر Power (الطاقة).

٢. افتح درج المسحوق وضع قليلاً منه.

٣. قم بتشغيل عملية توريد الغسالة بالماء.

٤. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).

يزيل ذلك أي ماء متبقٍ في الغسالة نتيجة للتشغيل الاختباري الذي قامت به الشركة المصنعة للجهاز.

ملاحظات خاصة!

ترتيب تحميل الملابس

- عند وضع الملابس داخل هذا الجهاز، تأكد من اتباع ترتيب التحميل التالي للحصول على الحد الأقصى لفاعلية الغسل. القمصان بدون رقبة والمناشف ومفارش الطاولات والقمصان وملاءات السرير وأغطية الوسادات والسراويل الداخلية والمناشف الصغيرة ثم أخيرًا المناديل.

وظيفة التحسس التلقائي

- بالنسبة لبرامج الغسيل Fuzzy (ذكي) وQuick (سريع) وSuper clean (نظافة قصوى) وWater saving (توفير الماء)، يتم استشعار حجم الغسيل تلقائياً ومن ثم يتم تحديد مستوى الماء المناسب ووقت الغسيل كما يتم تحديد دورة الشطف ووقت التنشيف تلقائيًا للغسيل التلقائي.
- عقب التشغيل، يتم تحديد الدورة ويتم ضغط الزر Start/Pause (تشغيل/إيقاف مؤقت). ثم يبدأ حوض الغسيل في الدوران بدون ماء. يتم التعرف بهذا الإجراء على حجم الغسيل الموجود في حوض الغسيل، أي إنه ليس خللاً في أداء الجهاز. بعد عملية التحسس هذه، يتم توريد الماء تلقائيًا.

إضافة مسحوق الغسيل ومنعّم الأقمشة

- تقوم الغسالة باستشعار كمية الغسيل وتحديد مستوى الماء. ثم يبدأ توريد الماء في الحال.
- أثناء عملية توريد الماء، يمكن فتح درج المسحوق لإضافة المسحوق. على الرغم من ذلك، يفضل ضغط الزر Start/Pause (تشغيل/إيقاف مؤقت) لإيقاف توريد الماء وإضافة المسحوق. أغلق الغطاء واضغط الزر Start/Pause (تشغيل/إيقاف مؤقت) مرة أخرى. تعد هذه الطريقة مناسبة أكثر. (ومع ذلك، لا يمكنك فتح الغطاء أثناء دورة توفير المياه.)
- إذا تم إدخال منعّم الأقمشة في موزع المنعّم، يتم إضافته تلقائيًّا في دورة الشطف الأخيرة.

ضع الغسيل في الغسالة وأضف المسحوق

- يجب الانتباه إلى عدم تجاوز وزن الملابس المحدد في الغسالة. استخدم المسحوق الملائم للمنسوجات التي تغسلها.

- إذا كان الغطاء مفتوحاً أثناء التشغيل، تتوقف الغسالة عن العمل تلقائياً للأمان. (باستثناء توريد الماء الذي يمكن أن يستمر والغطاء مفتوحاً.)
- عندما يتم اختيار الماء الساخن، يتم توريد كلاً من الماء البارد والساخن في العشرين دقيقة الأولى لحماية الملابس.
- يمكن التحكم في مدة الغسيل ودورة الشطف ومدة التنشيف في كل دورة أثناء الغسيل.

WA80SPWFP-02817E-01_AR.indd 10 1/15/2013 12:34:09 PM

لوحة التحكم

للحصول على مزيد من التفاصيل، راجع لوحة التحكم الخاصة بالغسالة.

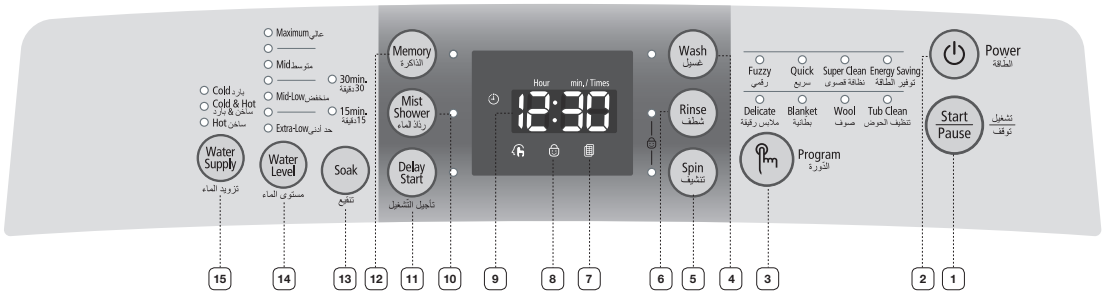

١	الزر START/PAUSE (تشغيل/إيقاف مؤقت)	اضغط لإيقاف الدورات مؤقتاً وإعادة تشغيلها. لتغيير نمط عملية الغسيل أثناء التشغيل، اضغط هذا الزر للإيقاف، ثم اضغط عليه مرة أخرى لإعادة تشغيل الغسالة بعد تغيير نمط عملية الغسيل.
٢	الزر POWER (الطاقة)	قم بالضغط على هذا الزر مرة واحدة لبدء التشغيل. اضغط هذا الزر مرة أخرى لإيقاف التشغيل.
٣	زر Program SELECTION (تحديد دورة)	اضغط على هذا الزر بشكل متكرر للتبديل بين دورات الغسيل: [Fuzzy (ذكي) ← Quick (سريع) ← Super Clean (نظافة قصوى) ← Water Saving (توفير الماء) ← Clean Tub (تنظيف الحوض) ← Wool (صوف) ← Blanket (بطانية) ← Delicate (رقيق)]
٤	الزر WASH (غسل)	اضغط على هذا الزر للقيام بدورة غسيل فقط أو لضبط وقت الغسيل.
٥	الزر SPIN (تنشيف)	اضغط على هذا الزر لإجراء عملية تنشيف فقط أو لضبط وقت التنشيف. عند تحديد دورة التنشيف فقط، يختلف وقت التنشيف عن الوقت الإجمالي المتبقي. ويرجع ذلك إلى أن الوقت الإجمالي المتبقي يتضمن وقت التنشيف الفعلي ووقت تصريف الماء وإيقاف الغسالة.
٦	الزر RINSE (شطف)	اضغط على هذا الزر لإجراء دورة الشطف فقط أو لضبط حجم دورات الشطف.
٧	FILTER CHECK (التحقق من المصفاة)	عند انتهاء الغسيل، يضيء مصباح التحذير في filter check (التحقق من المصفاة). عند فتح الباب، ينطفئ المصباح. (لا يعد ذلك خللاً.) عند انسداد المصفاة الفعالة، قد تلتصق المواد الغريبة بالغسيل. لضمان الحصول على غسيل نظيف، الرجاء إزالة أي مواد غريبة من على المصفاة بعد كل غسلة.
٨	وظيفة CHILD-LOCK (التأمين ضد عبث الأطفال)	يساعد هذا الجهاز على حماية الأطفال من التعرض للأذى دون قصد أثناء اللعب بالغسالة. • كيفية تشغيل وظيفة Child Lock التأمين ضد عبث الأطفال: - اضغط على الزر "Power (الطاقة)" للانتقال إلى وضع الغسيل الأولي. - بالضغط على الزر "Start/Pause (تشغيل/إيقاف مؤقت)" ، تبدأ عملية الغسيل وفي حالة الاحتياج إلى وظيفة Child Lock (التأمين ضد عبث الأطفال) أثناء الغسيل - اضغط على كل من الزرين "Rinse (شطف)" و "Spin (تنشيف)" في نفس الوقت. (لمدة ٣ ثوان) (ملاحظة: لا يمكنك تشغيل الوظيفة دون الضغط على الزر "Power (الطاقة)" . في حالة تنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال)، يومض رمز Child Lock (التأمين ضد عبث الأطفال). • لإلغاء تأمين وظيفة Child-Lock (التأمين ضد عبث الأطفال): في حالة برمجة وظيفة "Child-Lock (التأمين ضد عبث الأطفال)"، اضغط كل من الزرين "Rinse (شطف)" و"Spin (تنشيف)" في نفس الوقت.
٩	الوقت المتبقي، وقت تأجيل التشغيل، شاشة الأخطاء	تقوم الشاشة بعرض وقت الغسيل المتبقي، ووقت تأجيل التشغيل المحفوظ ورسائل الخطأ.
١٠	زر MIST SHOWER (شلال مائي) (اختياري)	اضغط فوق هذا الزر مرة واحدة للتشغيل. يعمل هذا الشلال على إذابة مسحوق الغسيل بشكل أكثر فعالية ليترك أقل بقايا ممكنة.
١١	الزر DELAY START (تأجيل التشغيل)	اضغط على هذا الزر لإنهاء الغسيل في وقت محدد. قم بإيقاف تشغيل الغسالة لإلغاء وقت التشغيل المؤجل مسبقاً. يمكنك ضبط وقت التشغيل المؤجل من ٣ إلى ١٨ ساعة.

WA80SPWFP-02817E-01_AR.indd 11 1/15/2013 12:34:09 PM

إعداد الغسالة

١٢ الزر MEMORY (ذاكرة) (اختياري)	اضغط هذا الزر مرة واحدة للتشغيل. حدد يدويًا الوظيفة التي تريد استخدامها. يتم حفظ اختياراتك تلقائيًا عند الضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت). لاستخدام الدورة المحفوظة في الذاكرة، اضغط على الزر Memory (ذاكرة) ثم اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت). - سيتم عرض الوظائف المحفوظة في الذاكرة على اللوحة. ضع بعض من مسحوق الغسيل ومسحوق الشطف بما يتناسب مع مستوى الماء وأغلق الغطاء. تتيح هذه الوظيفة تذكر الوظائف المستخدمة بكثرة بحيث يمكن استخدامها بسهولة عند الحاجة.
١٣ الزر SOAK (نقع)	اضغط على هذا الزر لنقع الغسيل قبل غسله. لا يمكن تحديد هذه الوظيفة أثناء دورة Delicate (رقيق) و wool (صوف). يتم تشغيل وظيفة النقع تلقائيًا أثناء تشغيل دورة Clean tub (تنظيف الحوض). يمكنك ضبط وقت النقع بين ١٥ إلى ٣٠ دقيقة.
١٤ الزر WATER LEVEL (مستوى الماء) (اختياري)	يتم ضبط مستوى الماء تلقائيًا. مع ذلك، يمكنك تحديد مستوى الماء يدويًا بالضغط على هذا الزر بشكل متكرر.
١٥ الزر WATER SUPPLY (توريد الماء)	اضغط على هذا الزر بشكل متكرر للتنقل بين خيارات الماء: Cold (بارد) ← Cold & Hot (بارد & ساخن) ← Hot (ساخن) ← Cold (بارد)

البرنامج Fuzzy (ذكي)

يمكنك استخدام هذه الدورة لتحديد أفضل دورة غسيل تلقائياً.

١. اضغط على الزر **Power (الطاقة)** "**تشغيل**" الغسالة.
٢. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**. يتم تحديد مستوى الماء تلقائيًا.
٣. ثم تبدأ دورات الغسيل، والشطف، والتنشيف.
٤. لإيقاف أحد البرامج مؤقتًا، اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** مرة أخرى. يمكنك تغيير البرنامج أثناء الإيقاف المؤقت.
٥. أغلق الغطاء.

البرنامج Quick (سريع)

يُعد البرنامج (سريع) مناسبًا للملابس الخفيفة أو الملابس المتسخة اتساخاً خفيفاً.

١. اضغط على الزر **Power (الطاقة)** "**تشغيل**" الغسالة.
٢. اضغط على زر تحديد **Program (البرنامج)**.
٣. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**. يتم تحديد مستوى الماء تلقائيًا.
٤. ثم تبدأ دورات الغسيل، والشطف، والتنشيف.
٥. لإيقاف أي دورة مؤقتًا، اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** مرة أخرى. يمكنك تغيير البرنامج أثناء الإيقاف المؤقت.
٦. أغلق الغطاء.

برنامج Super Clean (نظافة قصوى)

استخدم هذه الدورة لتحقيق أعلى درجة من النظافة للملابس.

توفر هذه الدورة أفضل أداء لعملية الغسيل من خلال نظام النظافة القصوى المكون من ٥ خطوات.

١. اضغط على الزر **Power (الطاقة)** "**تشغيل**" الغسالة.
٢. اضغط على زر تحديد **Program (البرنامج)**.
٣. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

يتم تحديد مستوى الماء بين Maximum (عالٍ) و Mid (متوسط) أو عند المستوى المتوسط بين Mid (متوسط) و Mid-low (متوسط منخفض).

٤. أغلق الغطاء.

WA80SPWFP-02817E-01_AR.indd 12 1/15/2013 12:34:09 PM

برنامج Energy Saving (توفير الطاقة)

استخدم هذه الدورة للتوفير في استهلاك الطاقة.

١. اضغط على الزر **Power (الطاقة)** لـ "**تشغيل**" الغسالة.
٢. اضغط على الزر **Course (دورة)** ثلاث مرات.
٣. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.
يتم تحديد مستوى الماء تلقائيًا. ثم تبدأ عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.
٤. أغلق الغطاء.

الحفاظ على الحوض نظيفًا

عند استخدام الغسالة في الأجواء الرطبة لفترة طويلة، قد تلتصق البكتريا العالقة في الهواء بأنواعها المختلفة بالحوض وتكون أجزاء متسخة سوداء (فطريات) مما قد يلحق الضرر بالإنسان.
للحفاظ على الحوض نظيفاً وصحياً دوماً، ينصح بقراءة الجزء الخاص "بدورة **Clean Tub program** (تنظيف الحوض)" الموجود أعلاه واستخدام المواد المطهرة أو المنظفة الموصى بها فقط لتنظيف الحوض بانتظام مرة واحدة على الأقل كل شهر وبما لا يزيد عن ثلاثة أشهر.

دورة Wool (صوف)

يمكنك استخدام هذه الدورة لغسيل الملابس الرقيقة مثل الستارات القابلة للغسيل والستارات الصوفية والملابس الصوفية الأخرى.

١. اضغط على الزر **Power (الطاقة)** "**لتشغيل**" الغسالة.
٢. اضغط على زر تحديد **Program (البرنامج)**.
٣. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.
٤. ثم تبدأ دورات الغسيل، والشطف، والتنشيف.
٥. لإيقاف إحدى الدورات مؤقتًا، اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** مرة أخرى. يمكنك تغيير الدورة أثناء الإيقاف المؤقت.
٦. أغلق الغطاء.

- يمكنك تحديد ماء (بارد) Cold فقط.
- تتميز دورة التنشيف الأخيرة بأنها دورة خفيفة لمنع تجعيد الأقمشة.
- استخدم مسحوق الغسيل الموضح على الملابس فقط.
- يمكنك الرجوع إلى رقعة العناية الموجودة على الملابس للحصول على المعلومات الصحيحة لعملية الغسيل.
- تأكد أن الأزرار مثبتة وأن الغسيل تم قلبه على ظهره.

الدورة Blanket (بطانية)

استخدم هذه الدورة لغسيل الأشياء كبيرة الحجم مثل البطاطين وملاءات الأَسرة.

١. اضغط على الزر **Power (الطاقة)** "**لتشغيل**" الغسالة.
٢. اضغط على زر تحديد **Program (البرنامج)**.
٣. اضغط على الزر **Start/Pasue (تشغيل/إيقاف مؤقت)**.
٤. ثم تبدأ دورات الغسيل، والشطف، والتنشيف.
٥. لإيقاف إحدى الدورات مؤقتًا، اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** مرة أخرى. يمكنك تغيير الدورة أثناء الإيقاف المؤقت.
٦. أغلق الغطاء.

- لا تقم بغسل البطانيات المكهربة والسجاد الكهربائي.
- قم بطي القطع ذات الحجم الكبير (البطاطين وملاءات السرير) بالطريقة التالية قبل وضعها داخل المجفف.
- قم بشراء شبكة للغسيل الخفيف وكبير الحجم (مثل الملابس الكشميرية والبطاطين) لأنها قد ترتفع إلى أعلى الغسالة مما قد يتسبب في تلفها.

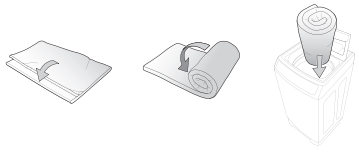

البرنامج Delicate (رقيق)

يُستخدم هذا البرنامج للستارات القابلة للغسيل والستارات الصوفية والملابس الخفيفة، الخ.

١. اضغط على الزر **Power (الطاقة)** لـ "**تشغيل**" الغسالة.
٢. اضغط على الزر **Course (دورة)** ست مرات
٣. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.
ثم تبدأ عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.
٤. أغلق الغطاء.

- يمكنك تحديد ماء بارد فقط.
- تعمل دورة التنشيف الأخيرة بشكل خفيف لمنع تجعيد الأقمشة.
- استخدم مسحوق الغسيل الموضح في الغسيل.

WA80SPWFP-02817E-01_AR.indd 13 1/15/2013 12:34:10 PM

إعداد الغسالة

Delay Start (تأجيل التشغيل)

يمكنك استخدم هذه الوظيفة لتحديد وقت لبدء دورة الغسيل. عندما تكون بحاجة للخروج ولا يمكنك مراقبة الغسالة على سبيل المثال.

١. اضغط على الزر **Power (الطاقة)** "**لتشغيل**" الغسالة.
٢. اضغط على الزر **Delay Start (تأجيل التشغيل)** مرة واحدة.
حتى تستطيع تعيين وقت **Delay Start (تأجيل التشغيل)** ما بين ٣ إلى ١٨ ساعة.
٣. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** ثم أضف كمية مناسبة من المسحوق في درج المسحوق.
٤. أغلق الغطاء. ينتهي الغسيل بانتهاء الوقت المحدد.
قم بإضافة مسحوق ومنعِّم طبقاً لمستوى الماء ثم أغلق الغطاء.

- يجب إضافة المسحوق في درج المسحوق.
- في حالة إضافة المسحوق إلى الغسيل مباشرة، قد تفقد بعض الملابس لونها بسبب تأجيل التشغيل.
- لإلغاء Delay Start (تأجيل التشغيل)، اضغط على الزر **Power (الطاقة)**.

Memory (ذاكرة)

يمكنك استخدام هذه الدورة لإنشاء الدورات المفضلة أو المستخدمة بشكل متكرر وحفظها في ذاكرة الغسالة حتى يمكنك اختيارها في أي وقت.

١. اضغط على الزر **Power (الطاقة)** "**لتشغيل**" الغسالة.
٢. اضغط على الزر **Memory (ذاكرة)**.
٣. حدد الوظائف المستخدمة بشكل متكرر.
حدد Wash (غسيل) أو Rinse (شطف) أو Spin (تنشيف) وفق متطلباتك.
٤. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** لتخزينها.
٥. قم بإضافة مسحوق ومنعِّم طبقاً لمستوى الماء ثم أغلق الغطاء.

- إذا قمت بتحديد الزر Memory (ذاكرة) بعد "تشغيل" الغسالة، يتم استرداد الإعدادات المخزنة تلقائيًا.
- لتغيير الإعدادات المخزنة، حدد الزر Memory (ذاكرة) وأعد تكوين الإعدادات ثم اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت). حينئذ، يتم حفظ التغييرات.

Child Lock (التأمين ضد عبث الأطفال)

هذه الوظيفة مخصصة لحماية الأطفال وكبار السن وقليلي الخبرة.

١. اضغط على الزر Power (الطاقة).
٢. لتنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال) اضغط مع الاستمرار على الزرين Rinse (شطف) و Spin (تنشيف) معًا لمدة ٣ ثوانٍ. في حالة تنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال)، يومض رمز Child Lock (التأمين ضد عبث الأطفال.)
٣. التشغيل بعد تنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال).
- حتى إذا تم تنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال)، تعمل كافة الأزرار حتى يتم فتح الباب.
- عند فتح الباب أثناء تنشيط Child Lock (التأمين ضد عبث الأطفال) تصدر أصوات تنبيه ورسالة خطأ. وفي خلال ٣٠ ثانية يبدأ تصريف الماء تلقائيًا. ولكن إذا قمت بإغلاق الباب خلال ٣٠ ثانية، فلن يتم تصريف الماء. (رسالة الخطأ المعروضة "CL", "dE").
- لإضافة غسيل بعد تنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال)، يجب تعطيل وظيفة Child Lock (التأمين ضد عبث الأطفال).
٤. لتعطيل وظيفة Child Lock (التأمين ضد عبث الأطفال) اضغط مع الاستمرار على الزرين Rinse (شطف) و Spin (تنشيف) معًا لمدة ٣ ثوانٍ. في حالة تعطيل وظيفة Child Lock (التأمين ضد عبث الأطفال)، يتم إيقاف تشغيل الرمز Child Lock (التأمين ضد عبث الأطفال.)
٥. لمسح شاشة "CL" بعد اكتمال التصريف، أغلق باب الغسالة وقم بإيقاف تشغيل الغسالة ثم أعد تشغيلها.

تنبيه
- تعمل هذه الوظيفة على منع الإصابات والأعطال للمنتج بسبب عمليات تشغيل غير مناسبة أو العبث من قبل الأطفال أوكبار السن أو قليلي الخبرة.
- في حالة فتح الباب عند تنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال)، يتم تصريف المياه لمنع غرق الأطفال.
- لإضافة غسيل بعد تنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال)، يجب تعطيل وظيفة Child Lock (التأمين ضد عبث الأطفال).
- حتى في حالة إيقاف تشغيل الطاقة ثم إعادة تشغيلها عند تشغيل وظيفة Click Lock (التأمين ضد عبث الأطفال) تظل وظيفة Click Lock (التأمين ضد عبث الأطفال) نشطة.
- فبمجرد تنشيط Click Lock (التأمين ضد عبث الأطفال) حتى في حالة إيقاف تشغيل الطاقة، سيتم تصريف الماء تلقائيًا خلال ٣٠ ثانية إذا كان الباب مفتوحًا.
- لا يمكن تعطيل وظيفة Child Lock (التأمين ضد عبث الأطفال) إذا ظهرت رسالة الخطأ CL.
(إلا إنه يمكن تعطيل وظيفة Child Lock (التأمين ضد عبث الأطفال) إذا ظهرت رسالة الخطأ dE.)

WA80SPWFP-02817E-01_AR.indd 14 1/15/2013 12:34:10 PM

وظائف يدوية

يمكن تحديد الوظيفة لكل برنامج.

(مثال) للغسيل البسيط كما في دورة الأوساخ القليلة :

Power (الطاقة) ← تحديد برنامج الأوساخ القليلة ← Wash (غسيل) ← Start/Pause (تشغيل/إيقاف مؤقت)

الغسيل فقط

اضغط على الزر **Power (الطاقة)**.

اضغط على الزر **Wash (غسيل)**.

اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

عند الضغط على الزر **Wash (غسيل)** أثناء الغسيل، يمكن تغيير مدة الغسيل لمدة تتراوح بين ٦ إلى ٣٠ دقيقة.

الشطف فقط

اضغط على الزر **Rinse (شطف)**.

اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

تتم عملية الشطف على مرتين.

عند الضغط على الزر **Rinse (شطف)** أثناء الشطف، يمكن تغيير عدد مرات الشطف لتتراوح من ٢ إلى ٥ مرات.

التنشيف فقط

اضغط على الزر **Spin (تنشيف)**.

اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

عند الضغط على الزر **Spin (تنشيف)** أثناء الدوران، يمكن تغيير مدة الدورة من دقيقة إلى ٩ دقائق.

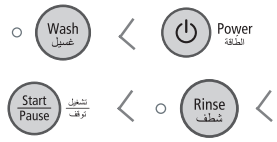

الغسيل والشطف

اضغط على كل من الزرين **Wash (غسيل)** و **Rinse (شطف)**.

اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** مرة واحدة.

يقوم ذلك بالتحقق من كمية الغسيل، ويحدد زمن فترة الغسل والشطف تلقائياً.

عند الضغط على كل من الزرين **Wash (غسيل)** و **Rinse (شطف)** أثناء التشغيل.

يتم تحديد زمن فترة الغسل بين ٦ إلى ٣٠ دقيقة، ويتم تحديد وقت الشطف بين مرة وخمس مرات.

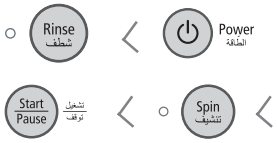

الشطف والتنشيف

اضغط على الزر **Rinse (شطف)** و **Spin (تنشيف)**.

اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** مرة واحدة.

ثم تبدأ عمليتا الشطف والتنشيف.

عند الضغط على الزر **Rinse (شطف)** و **Spin (تنشيف)** أثناء التشغيل، يتم تحديد عدد مرات الشطف بين ٢ و٥ مرات، ويتم تحديد المدة اللازمة للتنشيف بين دقيقة إلى ٩ دقائق.

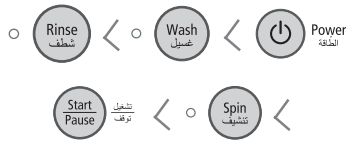

الغسل والشطف والتنشيف

اضغط على الزر **Wash (غسل)** و **Rinse (شطف)** و **Spin (تنشيف)**.

اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** مرة واحدة.

يتم تشغيل وظيفة **Wash (غسل)** و **Rinse (شطف)** و **Spin (تنشيف)**.

WA80SPWFP-02817E-01_AR.indd 15 1/15/2013 12:34:12 PM

التركيب والصيانة

دليل المستخدم مخصص للاستخدام العام.
استعن بدليل المستخدم الخاص بطراز الغسالة.

البيئة

اترك مساحة

اترك مسافة تقدر بـ ١٠ سم بين الغسالة والحائط.

ضع الغسالة على أرض ثابتة ومستوية.

إذا تم وضع الغسالة على سطح غير مستو أو ضعيف سيؤدي هذا إلى ارتفاع صوت الغسالة أو اهتزازها أثناء التشغيل. (المسافة المسموح بها ١ ياردة) قم بتعديل الأرجل للوصول إلى وضع متوازن.

لا تقم أبداً بتثبيت الغسالة بالقرب من الماء.

لا تضع الغسالة في غرف ينبعث منها الأبخرة أو حيث تكون معرضة بشكل مباشر إلى المطر. قد تتسبب الرطوبة في تلف المادة العازلة التي تحيط بالأسلاك الكهربائية مما ينتج عنه صدمات كهربائية.

تجنب الضوء المباشر لأشعة الشمس أو السخانات.

تتأثر مكونات الأسلاك الكهربائية المصنوعة من البلاستيك بالحرارة المباشرة. لا تقم أبداً بوضع الغسالة بالقرب من الأفران، أو غلايات الماء، إلى آخره. ولا تضعها تحت أشعة الشمس المباشرة.

يجب التخلص من كافة مواد التغليف بطريقة ملائمة بيئيًا.

الاستواء

- إذا لم تكن الغسالة مستوية على الأرض، فستهتز بشكل كبير أو قد تتوقف عن التشغيل. لذا يُرجي التأكد من أن الغسالة مستوية بشكل صحيح.

تأكد من وضع الغسالة بشكل مستو من خلال فحص وضع حوض الغسيل.

- افتح غطاء الغسالة، اسكب الماء داخل حوض الغسيل إلى أن يكون مستواه أدنى المضخة مباشرة، وقم بتعديل الأرجل بحيث تكون المضخة في وسط الماء كما هو مبين في الشكل.
- قم بإبعاد الغسالة أكثر من ١٠ سم عن الحائط.
- اضبط استواء الأرجل.

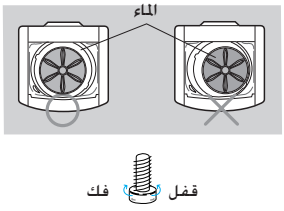

WA80SPWFP-02817E-01_AR.indd 16 1/15/2013 12:34:13 PM

توصيل خرطوم توريد الماء

١. قم بإزالة المحول من خرطوم توريد الماء.



٢. أولاً، باستخدام ملف برغي من نوع "+" أرخ البراغي الأربعة الموجودة بالمحول. ثم أخرج المحول وقم بلف الجزء (ب) باتجاه السهم لإحداث فجوة تقدر بنحو ٥ مم بينهما.

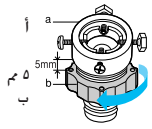

٣. صل المحوّل بصنبور الماء عن طريق ربط البراغي بإحكام. ثم لف الجزء (ب) باتجاه السهم وضع الجزأين (أ) و (ب) معاً.

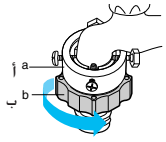

٤. صل خرطوم توريد الماء بالمحول. اسحب الجزء (ج) من خرطوم توريد الماء لأسفل. عند إرخاء الجزء (ج)، يتصل الخرطوم بالمحوّل تلقائياً محدثاً صوت "إغلاق".

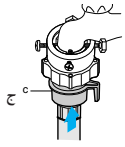

٥. صل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود في خلفية الغسالة. لف خرطوم توريد الماء في اتجاه عقارب الساعة.

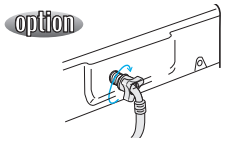

٥-١. صل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود في أعلى الغسالة. لف خرطوم توريد الماء في اتجاه عقارب الساعة.

- إذا كان صنبور الماء من نوع برغي، فقم بتركيب خرطوم توريد للماء يلائم الصنبور كما هو موضح. بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات.

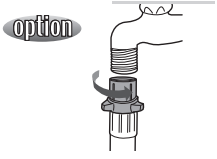

بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات.
استخدم صنبور من النوع العادي لتوريد الماء.
إذا كان الصنبور مربعًا أو كبيرًا جداً، أزل حلقة الإبعاد قبل إدخال الصنبور إلى المحوّل.

WA80SPWFP-02817E-01_AR.indd 17 1/15/2013 12:34:14 PM

التركيب والصيانة

كيفية توصيل خرطوم التصريف

في حالة استخدام غسالة ذات مضخة تصريف

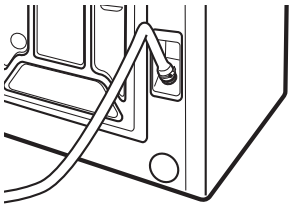

- قم بتركيب خرطوم التصريف بالجزء الخلفي من الغسالة.
  قم بتثبيت مُحكم الغلق على خرطوم التصريف وقم بربطه بشده لمنع تسرب المياه.

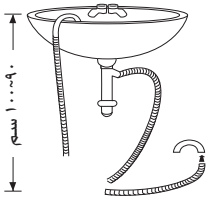

- ثبت خرطوم تصريف الماء على بعد يقدر بنحو ٩٠~١٠٠سم فوق الأرض.

تنبيهات حول إدخال خرطوم تصريف الماء (في حالة الغسيل العام)

١. يجب ألا يزيد طول خرطوم تصريف الماء عند توصيله بخراطيم أخرى عن ٣ أمتار.

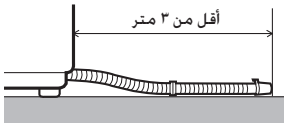

٢. كن حذراً في تصريف الماء حتى نهاية خرطوم التصريف.

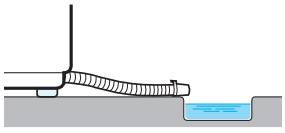

٣. يجب ألا تزيد عتبة الباب عن ٥ سم.



٤. لا تقم بتثبيت خرطوم التصريف الماء أسفل الغسالة.

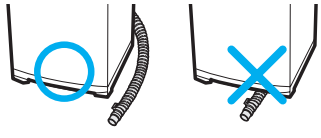

WA80SPWFP-02817E-01_AR.indd 18 1/15/2013 12:34:15 PM

تركيب لوحة الحماية من الحشرات option

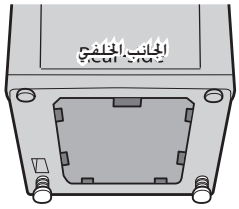

١. يسهل تثبيت المصراع عند رفع الجهاز قليلاً، كما هو موضح في الشكل أدناه.

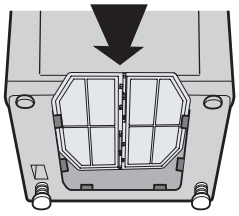

٢. أدخل المصراع بالكامل من خلال فتحات التثبيت من الخلف.

كيفية إضافة المسحوق

١. افتح درج المسحوق بدفعه باتجاه السهم كما هو موضح في الشكل ثم ضع المسحوق في الدرج المخصص له.
٢. ضع في كل مرة كمية ملائمة من المسحوق بحيث لا يفيض المسحوق من الدرج.

كيفية إضافة منعم الأقمشة

قم بإزاحة الغطاء وفتحه في اتجاه السهم، ثم ضع مسحوق الشطف وقم بدفع الغطاء في الاتجاه المعاكس لإغلاقه.

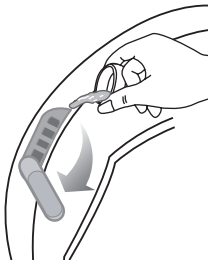

- عند تخزين كمية مناسبة (مقدار مرة واحدة) من منّعم الأقمشة في المكان المخصص للمنّعم، يتم وضعه في الدورة الأخيرة من الشطف.
- لا تستخدم المسحوق، أو المبيض، أو النشا في درج المنّعم.
- يؤدي الإفراط في استخدام المنّعم إلى نتائج غير مرضية.
- لا تفتح الغطاء أثناء دورة Spin Dry (التنشيف). إذا تم إضافة منعّم الأقمشة في وقت سابق، فإن هذا سينقص من فعاليته.
- لا تترك منعّم الأقمشة في موزّع منعّم الأقمشة لمدة طويلة، حيث أن المنعّم يصبح يابساً.

مصفاة وصلة توريد الماء

١. انزع المصفاة واغسلها جيداً.

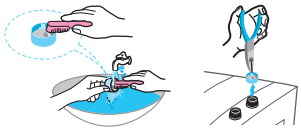

٢. ادفع المصفاة وصل الخرطوم بصمام توريد الماء بإحكام.

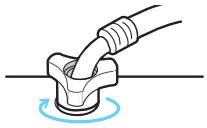

٣. تحقق من عدم وجود تسرب.
انتبه إلى إحكام ربط الوصلة.

WA80SPWFP-02817E-01_AR.indd 19 1/15/2013 12:34:17 PM

التركيب والصيانة

تنظيف المصفاة

قم بتنظيف شبكة المصفاة بانتظام للمحافظة على نظافة الغسالة.

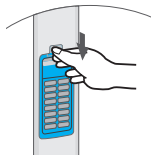

١. ادفع الجزء العلوي من المصفاة الفعالة واجذبه للداخل.

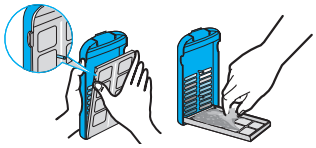

٢. افتح الغطاء كما هو مبين بالشكل.

٣. نظف المصفاة الفعالة.

٤. أغلق الغطاء وقم أولاً بإدخال الجزء السفلي في الحاوية ثم ادفع المصفاة حتى تسمع صوت "تثبيتها".

تنظيف مصفاة المضخة

١. ضع قطعة من القماش أو منشفة أسفل مصفاة الغسيل حتى لا تبتل الأرض. ولف المصفاة عكس اتجاه حركة عقارب الساعة واسحبها للخارج.
٢. قم بإزالة أي أوساخ من المصفاة.
٣. قم بإعادة المصفاة إلى مكانها عن طريق لف المصفاة في اتجاه عقارب الساعة حتى تعود إلى مكانها.

١

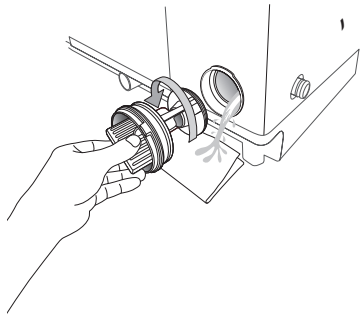

٢

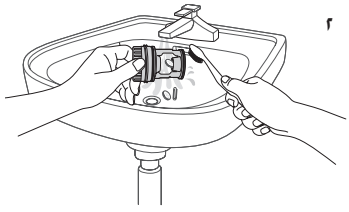

٣

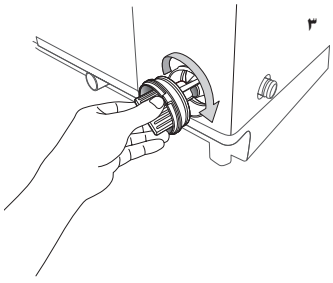

WA80SPWFP-02817E-01_AR.indd 20 1/15/2013 12:34:19 PM

استكشاف المشاكل وحلها

المشكلة	الفحص
الغسالة لا تعمل	- هل صنبور الماء مفتوح؟ - هل الغسالة متصلة بمصدر التيار الكهربي؟ - هل التيار الكهربائي مقطوع؟ - هل ضغط الماء كافي؟
لا يتم تصريف الماء	هل خرطوم التصريف موضوع لأسفل؟(بدون مضخة) - هل خرطوم التصريف متجمد؟ - هل خرطوم التصريف مسدود؟ - إذا لم يتم تصريف الماء خلال ١٥ دقيقة، سيسمع طنين، وسيعرض مؤشر الوقت المتبقي "5E". 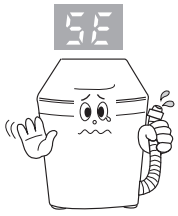
لا يتم تزويد الماء	- هل صنبور الماء مفتوح؟ - هل الماء مقطوع؟ - هل خرطوم تزويد الماء أو وصلة الخرطوم مسدودة؟ - هل صنبور الماء متجمد؟ - إذا لم يتم انتهاء تزويد الماء في خلال ساعة واحدة أو لم يحدث تغيير في مستوى الماء بعد أربع دقائق من بدء تزويد الماء، سيسمع طنين وسيتم عرض "4E" على مؤشر الوقت المتبقي. 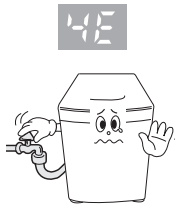
التنشيف لا يعمل	- هل تم توزيع الغسيل بالتساوي في الغسالة؟ - هل تم وضع الغسالة على أرض ثابتة ومستوية؟ 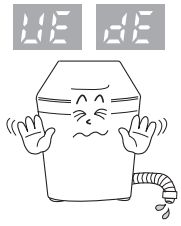
فيضان الماء	- إعادة التشغيل بعد الدوران. - في حالة استمرار ظهور علامة الخطأ، اتصل بالشركة.
يشير ذلك إلى حدوث خطأ بوظيفة Child Lock (التأمين ضد عبث الأطفال)	- تومض رسالة الخطأ بفاصل زمني ثانية واحدة فقط ويتم تصريف الماء مع إصدار صوت تنبيه. يتعذر إيقاف التصريف. (الرسالة المعروضة: "CL" أو"dE") - هذه الوظيفة لمنع الأطفال من الغرق عند السقوط في حوض الغسيل. عند اكتمال التصريف وإيقاف تشغيل الطاقة ثم تشغيلها، يتم تشغيل الغسالة بشكل عادي. - لمسح شاشة "CL"، قم بأغلاق باب الغسالة وقم بإيقاف تشغيل الغسالة ثم تشغيلها بعد اكتمال التنشيف.

WA80SPWFP-02817E-01_AR.indd 21 1/15/2013 12:34:21 PM

الغسالة لا تعمل؟

المشكلة	الفحص والحل
انقطاع التيار الكهربي.	هل الجهد الكهربي طبيعي؟
	هل الغسالة متصلة بمصدر التيار الكهربي؟ قم بتوصيل سلك التيار الكهربي. ⊂ لا يتم تصريف الماء.
	هل خرطوم التصريف متجه لأسفل؟ اجعل خرطوم التصريف متجهاً لأسفل.
	هل خرطوم التصريف منثني؟ قم بفك الثنيات الموجودة في خرطوم التصريف.
	هل فتحة خرطوم التصريف مسدودة؟ قم بإزالة النفايات جيداً.
الغسالة لا تعمل.	هل غطاء الغسالة مفتوح؟ ⊂ أغلق الغطاء.
	هل الزر Pause (إيقاف مؤقت) قيد التشغيل؟ ⊂ اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) مرة أخرى وتأكد من بدء تشغيل الغسالة.
	هل تم ملء الغسالة بالماء حتى المستوى المطلوب؟ ⊂ إذا كان ضغط الماء منخفضاً، فستستغرق عملية بدء الغسيل وقتاً طويلاً.
	هل الصنبور مغلق؟ ⊂ افتح الصنبور لتوريد الماء.
إذا كان خرطوم التصريف والدوران متجمدين، قم بما يلي.	• أضف الماء الساخن إلى صنبور الماء المتجمّد وأزل خرطوم التصريف. انقع الخرطوم في الماء الساخن. • قم بدفق الماء الساخن في سلة التنشيف لمدة ١٠ دقائق تقريباً. • ضع منشفة مبللة بالماء الساخن على وصلة خرطوم التصريف. • بعد فك تجميد خرطوم التصريف، قم بتوصيله مرة أخرى وتحقق مما إذا كان يتم تصريف الماء بالشكل الملائم.
يتم تصريف الماء إلى الخارج في الحال.	• انسداد خرطوم التصريف بعملات معدنية أو دبابيس. خرطوم التصريف معلقا على خطّاف خرطوم التصريف. قم بملء نصف سلة التنشيف بالماء وحاول إجراء التنشيف مرة أخرى.
يتم تسريب الماء من وصلة خرطوم توريد الماء.	إذا كان الجزء الخاص بوصلة الصنبور غير محكم الربط، فقد يتسرب الماء. ⊂ كرر خطوات التجميع مرة أخرى. (راجع "توصيل خرطوم توريد الماء")
	تحقق مما إذا كان المطاط الخاص بخرطوم تزويد الماء في وضعه الصحيح. ⊂ اربط المسامير مرة أخرى بإحكام.
	هل خرطوم توريد الماء منثني؟ ⊂ قم بفك الثنايا الموجودة في الخرطوم.
	إذا كانت عملية توريد الماء قوية جداً، قد يحدث تسرب للماء. ⊂ أغلق الصنبور قليلاً.
	هل يحدث تسرب للماء من الصنبور نفسه؟ ⊂ أصلح الصنبور. لا يتم توريد الماء.
	هل قمت بالضغط على الزر Start/Pause (تشغيل/إيقاف تشغيل) بعد تحديد توريد الماء؟ ⊂ في حالة عدم الضغط على الزر Start/Pause (تشغيل/إيقاف تشغيل)، لن يتم توريد الماء. اضغط على الزر Start/Pause (تشغيل/إيقاف تشغيل).
	هل الصنبور مغلق؟ ⊂ افتح الصنبور.

WA80SPWFP-02817E-01_AR.indd 22 1/15/2013 12:34:21 PM

المشكلة	الفحص
يتم تسريب الماء من وصلة خرطوم توريد الماء.	هل شبكة المصفاة الموجودة في خرطوم توريد الماء مسدودة بمواد غير نظيفة؟ نظّف شبكة المصفاة بفرشاة أسنان.
	هل تم إيقاف توريد الماء؟ في حالة توقف توريد الماء مؤقتاً، أغلق الصنبور وافصل التيار.
تُصدِر عملية التنشيف ضجيجاً وتُحدِث اهتزازات.	تحقق مما إذا كان قد تم توزيع الغسيل بالتساوي في الغسالة. قم بتوزيع الغسيل بالتساوي وابدأ تشغيل الغسالة مرة أخرى.
	تحقق مما إذا كانت الغسالة مستوية على أرض ثابتة ومسطحة. اجعل الغسالة مستوية.
	هل المقابض الخاصة باستواء الأرجل غير مربوطة بإحكام؟ اضبط استواء الأرجل.
	هل يوجد حول الغسالة مواد غير ضرورية؟ أبعد تلك الأشياء غير الضرورية عن الغسالة.

المواصفات

SW80SP

استهلاك الطاقة	غسيل	٤٧٠ وات	مستوى الماء القياسي	أقصى مستوى ٨٠ لتر
	تنشيف	٢٨٠ وات		متوسط ٥٧ لتر
الأبعاد (مم)		٦٠١ عرض × ٦٦٥ عمق× ١٠٥٨ ارتفاع (قاعدة مرتفعة) ٦٠١ عرض × ٦٦٥ عمق× ١٠٣٣ ارتفاع (قاعدة منخفضة)		متوسط منخفض ٤١ لتر
الوزن		٤٤ كجم		منخفض جدًا ٣٠ لتر
ضغط الماء		٠,٠٥ ~ ٠,٧٨ ميللي باسكال (٠,٥ ~ ٨,٠ كجم . قدم/سم٢)	استخدام الماء	٢٢٧ لتر
نوع الغسيل		النوع الرجاج	سرعة التنشيف	٧٢٠ دورة في الدقيقة

* تم تحديد مواصفات ملصق الطاقة باستخدام البرنامج الآتي وفقًا للمعيارين SASO 2692 و SASO 2693.

- برنامج الطراز SW80SP هو Energy Saving (توفير الطاقة) + High Water Level (مستوى ماء عالي) + Cold&Hot (بارد وساخن).

WA80SPWFP-02817E-01_AR.indd 23 1/15/2013 12:34:21 PM

هل لديك أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت على
Saudi Arabia	9200-21230	www.samsung.com

كود رقم. DC68-02817E-01_AR